



SHENZHEN BREE LIGHTING Co., LIMITED

Bld. M & J, Maoyuan Industrial Park, Zhangkengjing, Guanlan, Baoan, Shenzhen, Guangdong, China

Tel : +86-755-29739398/29676092

Fax: +86-755-89328498

E-mail: sales@breeighting.com

Web: www.breeighting.com

< Specifications. >

MEAN WELL DRIVER

Version:A0

(PIC) Model No.				
	BR-FL80W-03(ID:TA)	BR-FL100W-03(ID:TA)	BR-FL150W-03(ID:TA)	

Photoelectric Spec

Item	Power	Input Voltage	Input Frequency	leds	Power Factor	LuminousFlux	Beam Angle	Weight
BR-FL80W-03(ID:TA)	80W	AC100-240V	50/60HZ	COB	>0.9	6400 Lm	120°	6.9 kg
BR-FL100W-03(ID:TA)	100W	AC100-240V	50/60HZ	COB	>0.9	8000Lm	120°	6.9 kg
BR-FL150W-03(ID:TA)	150W	AC100-240V	50/60HZ	COB	>0.9	12000Lm	120°	7.6 kg

Light Source Spec

LED Type	Epistar/Bridgelux							
Color Accuracy(CRI)	CRI>70							
Color	WW(3000-3500K) NW (4000-4500K) CW(5000-6500K)							




Environment Spec.

Operational Temperature Range	-20~50 °C
Preservation Temperature Range	-40~60 °C
Operational Humidity Range	95% Rh or below(@-20°C~50°C)
Installation Area	Outdoor:IP65(Roadway, Pathway, Sidewalk, etc)
Lifespan	3 Years

Certification standard




Dimension Diagram

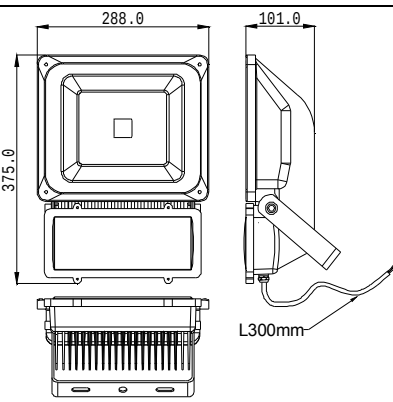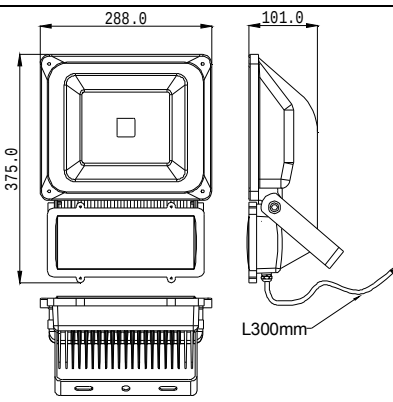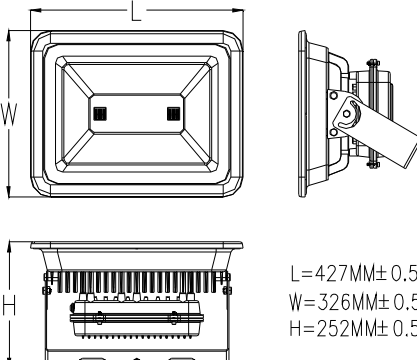
BR-FL80W-03(ID:TA) 		BR-FL100W-03(ID:TA) 	
BR-FL150W-03(ID:TA)  L=427MM±0.5 W=326MM±0.5 H=252MM±0.5			

Optical Spec


BR-FL80W-03(ID:TA)

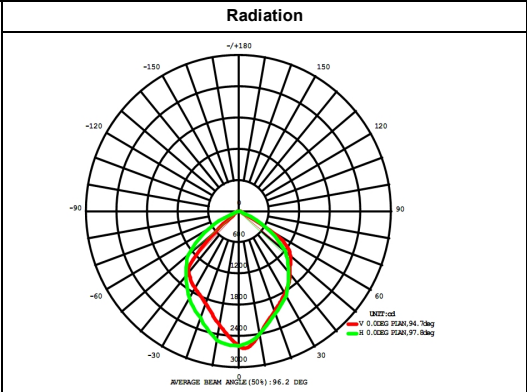


Lux Diagram

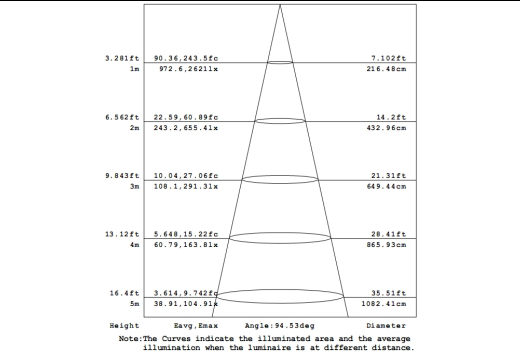


BR-FL100W-03(ID:TA)

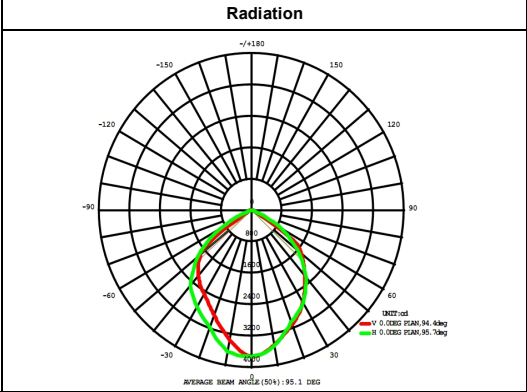


Lux Diagram

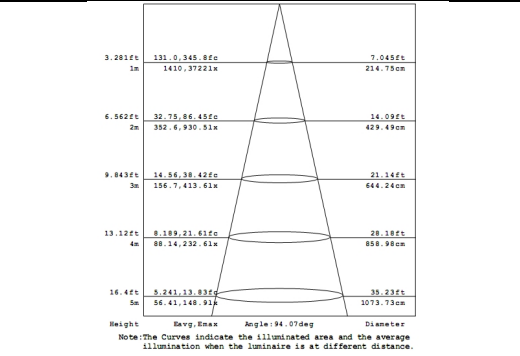

BR-FL150W-03(ID:TA)

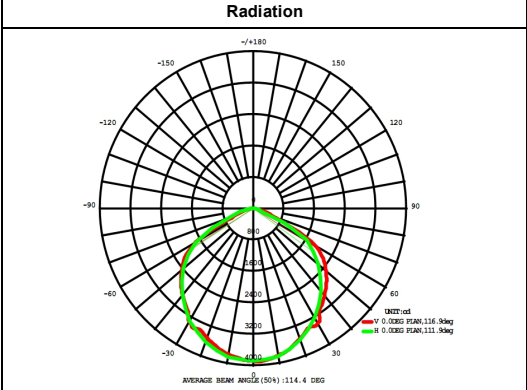


Lux Diagram

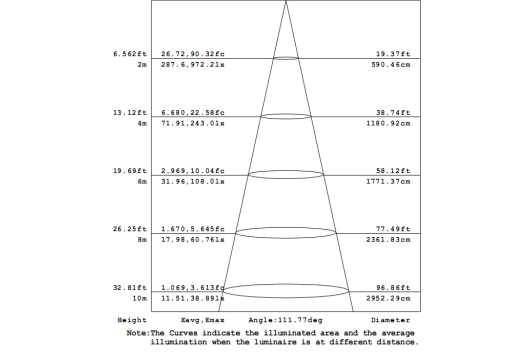


Installation and use

1.Install the LED Floodlight onto the wall or ground,punch hole on the wall orground,prepare the expansion screw,and then fasten the floodlight 。 First,adjust the angle you need,finally fasten the floodlights with screws

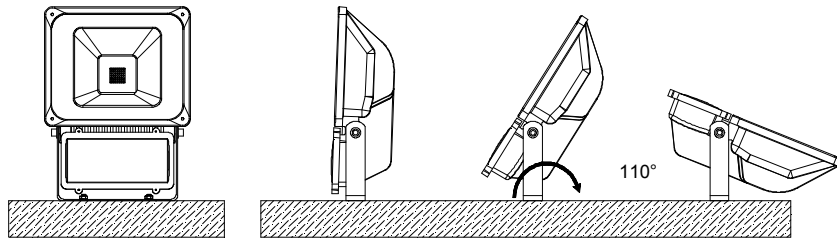

2.Connect the power wire from the Main lineto the power wire of the lamp,and then make treatment for water reistance. Pls note that the Brown color wire is Live wire,Blue wire is Null line,the yellow and green wire is Earth line.

3.Turn on the power supply to ensuer the light is working,Installed.

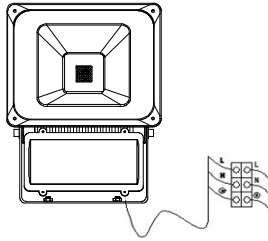

Attention

- 1.Please turn off the power supply befor installation or changing assembly parts.
- 2.The input voltage and the lamp should be adapted. After connecting the power line, please make sure the wiring section is insulated.
- 3.Non-professionals, must not install or dismantle the lamps.
- 4.All the floodlights during installation and in use should not be put with glass cover vertically upside.


Packing Spec

Item	Box			Carton		
	Measurement (mm)	Gross weight	Pcs/box	Measurement(mm)	Gross weight	Pcs/carton
BR-FL80W-03(ID:TA)	L390*W300*H140	5.2 kg	1	L410*W320*H310	11.74 kg	2
BR-FL100W-03(ID:TA)	L390*W300*H140	5.1 kg	1	L410*W320*H310	11.52 kg	2
BR-FL150W-03(ID:TA)	L450*W400*H300	8.87	1	L470*W430*H635	19.1 kg	2

Remarks:

- 1.White light series: WW (3000-3500K) NW (4000-4500K) CW (5000-6500K)
- 2.Luminous flux tolerance for $\pm 10\%$
- 3.Products shall be subject to any changes without prior notices.

Light attenuation map

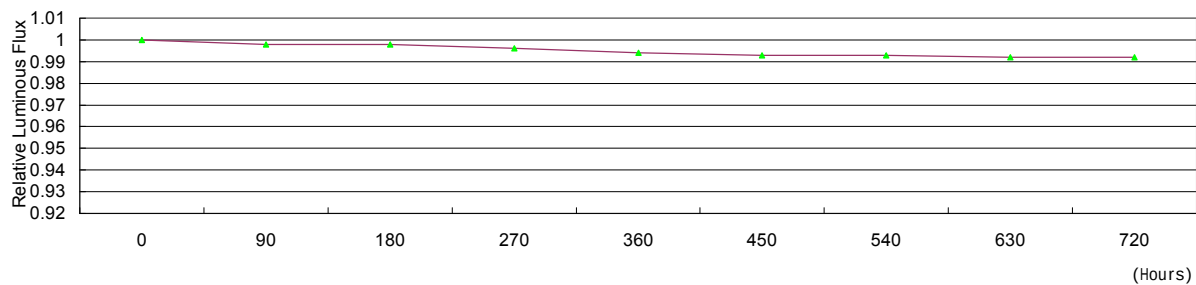

Through the 720H accelerated aging test,high and low temperature prediction in the rated under the working conditions after 35000H,will provide an average 70% optic maintenance ratio(L70).