




Quectel SC20 Series

Multi-mode Smart LTE Module with Wi-Fi & Bluetooth

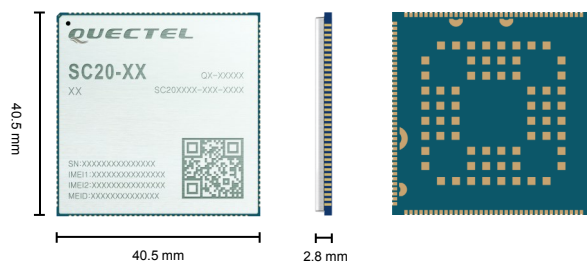

SC20 series is Quectel's new generation of multi-mode Smart LTE Cat 4 module. It contains five variants with built-in Android OS: SC20-E, SC20-A, SC20-AU, SC20-J and Wi-Fi & BT only version SC20-W. Additionally, it contains five variants with built-in Yocto Linux OS: SC20-EL, SC20-AL, SC20-AUL, SC20-JL and Wi-Fi & BT only version SC20-WL.

SC20 series module delivers maximum data rates of up to 150 Mbps downlink and 50 Mbps uplink based on LTE network, and supports wireless communication via IEEE 802.11a/b/g/n and BT 4.2 LE. It is an ideal solution for both industrial and consumer applications requiring high data rates and high-speed Internet access. The module is backward-compatible with existing EDGE and GSM/GPRS networks, ensuring connection even in remote areas devoid of 3G or 4G coverage.

SC20 series module supports multiple-input multiple-output (MIMO) technology. The use of multiple antennas at the receiver end at the same time and on the same frequency band greatly minimizes errors and optimizes the data speed. The module also combines high-speed wireless connectivity with embedded multi-constellation and high-sensitivity GNSS (GPS, GLONASS, Galileo and BeiDou) receiver for positioning.

A rich set of interfaces (such as LCM, Camera, Touch Panel, MIC, SPK, UART, USB, I2C) extend the applicability of the module to a wide range of M2M applications, such as MID, PND, POS, router, data card, in-vehicle solutions, smartphone, digital signage, security and industrial PDA.



Key Features

- ✓ Integration of Android OS or Yocto Linux OS, Wi-Fi, Bluetooth and GNSS
- ✓ Worldwide LTE, UMTS/HSPA+ and GSM/GPRS/EDGE coverage
- ✓ MIMO technology which meets demands for data rate and link reliability in modem wireless communication systems
- ✓ Multi-constellation GNSS receiver available for applications requiring fast and accurate fixes in any environment
- ✓ LCC + LGA package which ensures reliable connectivity with applications



Smart LTE Cat 4
Max. 150 Mbps (DL)
Max. 50 Mbps (UL)



Android OS



Yocto Linux OS



IEEE 802.11
a/b/g/n



BT 4.2
(BR/EDR + BLE)



GPS/GLONASS/
Galileo/BeiDou



Powerful Multimedia
Functions



USB 2.0 High Speed
Interface



LCC + LGA
Package

Version: 1.9 | Status: Released

Quectel SC20 Series

LTE Cat 4	SC20-E/-EL	SC20-A/-AL	SC20-AU/-AUL	SC20-J/-JL	SC20-W/-WL
Region/Operator	EMEA/Korea/Thailand/India	North America	Australia/Taiwan/Brazil	Japan	Global
OS	SC20-E: Android SC20-EL: Yocto Linux	SC20-A: Android SC20-AL: Yocto Linux	SC20-AU: Android SC20-AUL: Yocto Linux	SC20-J: Android SC20-JL: Yocto Linux	SC20-W: Android SC20-WL: Yocto Linux
eMCP (LPDDR3 + eMMC)	SC20-E: 1 GB + 8 GB 2 GB + 16 GB SC20-EL: 1 GB + 8 GB	SC20-A: 1 GB + 8 GB 2 GB + 16 GB SC20-AL: 1 GB + 8 GB	SC20-AU: 1 GB + 8 GB 2 GB + 16 GB SC20-AUL: 1 GB + 8 GB	SC20-J: 1 GB + 8 GB 2 GB + 16 GB SC20-JL: 1 GB + 8 GB	SC20-W: 1 GB + 8 GB 2 GB + 16 GB SC20-WL: 1 GB + 8 GB
Dimensions (mm)	40.5 × 40.5 × 2.8	40.5 × 40.5 × 2.8	40.5 × 40.5 × 2.8	40.5 × 40.5 × 2.8	40.5 × 40.5 × 2.8
Temperature Range					
Operating Temperature	-35 °C to +75 °C	-35 °C to +75 °C	-35 °C to +75 °C	-35 °C to +75 °C	-35 °C to +75 °C
Frequency Bands					
LTE-FDD	B1/B3/B5/B7/B8/B20	B2/B4/B5/B7/B12/B13/B25/B26	B1/B3/B5/B7/B8/B28	B1/B3/B8/B18/B19/B26	/
LTE-TDD	B38/B40/B41 ^①	/	B40	B41	/
WCDMA	B1/B5/B8	B1/B2/B4/B5/B8	B1/B2/B5/B8	B1/B6/B8/B19	/
GSM/EDGE	850/900/1800/1900 MHz	850/1900 MHz	850/900/1800/1900 MHz	/	/
BT	BT 2.1+EDR/3.0/4.1 LE/4.2 BLE	BT 2.1+EDR/3.0/4.1 LE/4.2 BLE	BT 2.1+EDR/3.0/4.1 LE/4.2 BLE	BT 2.1+EDR/3.0/4.1 LE/4.2 BLE	BT 2.1+EDR/3.0/4.1 LE/4.2 BLE
Wi-Fi	2.4/5 GHz, 802.11a/b/g/n	2.4/5 GHz, 802.11a/b/g/n	2.4/5 GHz, 802.11a/b/g/n	2.4/5 GHz, 802.11a/b/g/n	2.4/5 GHz, 802.11a/b/g/n
Bandwidth	1.4/3/5/10/15/20 MHz	1.4/3/5/10/15/20 MHz	1.4/3/5/10/15/20 MHz	1.4/3/5/10/15/20 MHz	/
GNSS	GPS/BeiDou/GLONASS or GPS/BeiDou/Galileo	GPS/BeiDou/GLONASS or GPS/BeiDou/Galileo	GPS/BeiDou/GLONASS or GPS/BeiDou/Galileo	GPS/BeiDou/GLONASS or GPS/BeiDou/Galileo	/
Certifications ^②					
Carrier	/	America: Verizon/AT&T/T-Mobile ^③ /Sprint ^④ Canada: Rogers/Telus ^③	Australia: Telstra	Japan: NTT DOCOMO/KDDI/SoftBank*	/
Regulatory	Global: GCF Europe: CE South Korea: KC Thailand: NBTC	Global: GCF North America: PTCRB America: FCC Canada: IC	Global: GCF Europe: CE Brazil: Anatel Taiwan/China: NCC Australia/New Zealand: RCM	Japan: JATE/TELEC	Europe: CE America: FCC Canada: IC Brazil: Anatel Japan: JATE/TELEC Australia/New Zealand: RCM
Others	RoHS/REACH	RoHS/REACH	RoHS/REACH	RoHS/REACH	RoHS/REACH
Data Transmission					
LTE-FDD Data Rate (Mbps)	150 (DL)/50 (UL)	150 (DL)/50 (UL)	150 (DL)/50 (UL)	150 (DL)/50 (UL)	/
LTE-TDD Data Rate (Mbps)	130 (DL)/30 (UL)	/	130 (DL)/30 (UL)	130 (DL)/30 (UL)	/
DC-HSPA+ Data Rate (Mbps)	42 (DL)/5.76 (UL)	42 (DL)/5.76 (UL)	42 (DL)/5.76 (UL)	42 (DL)/5.76 (UL)	/
WCDMA Data Rate (kbps)	384 (DL)/384 (UL)	384 (DL)/384 (UL)	384 (DL)/384 (UL)	384 (DL)/384 (UL)	/
EDGE Data Rate (kbps)	296 (DL)/236.8 (UL)	296 (DL)/236.8 (UL)	296 (DL)/236.8 (UL)	/	/
GPRS Data Rate (kbps)	107 (DL)/85.6 (UL)	107 (DL)/85.6 (UL)	107 (DL)/85.6 (UL)	/	/
Enhanced Features					
3GPP E-UTRA	Release 10	Release 10	Release 10	Release 10	/
Rx-diversity	●	●	●	●	/
DL MIMO 2 × 2	●	●	●	●	/
(U)SIM Card Detection	●	●	●	●	/
Firmware Upgrade via USB	●	●	●	●	●

Notes:

- ① B41 of SC20-E/-EL does not support full band and therefore is not certified by CE.
- ② The certification status listed here are only for Android-version SC20 series modules.
- ③ T-Mobile/Telus for data-only version has been done and that for voice version is TBD.
- ④ means TBD.
- * means ongoing.
- means supported.

Quectel SC20 Series

General features

Supply Voltage Range	3.5–4.2 V, Typ. 3.8 V
Power Consumption	20 μ A @ power off Typ. 3 mA @ sleep
Weight	Approx. 9.8 g
Package	LCC + LGA
Interfaces	
LCM	4-lane MIPI_DSI, up to 1.5 Gbps/lane, HD (720P) @ 60 fps
Camera	Uses MIPI_CSI, up to 1.5 Gbps/lane, supports two cameras: • 2-lane MIPI_CSI for rear camera, up to 8 MP • 1-lane MIPI_CSI for front camera, up to 2 MP
Touch Panel	Capacitive touch panel
UART	× 2, UART1 supports hardware flow control, up to 4 Mbps
USB 2.0	• Supports high speed mode, up to 480 Mbps • Supports USB 2.0 OTG, USB OTG + charge and USB to Ethernet functions
(U)SIM	× 2, supports 1.8/3 V (U)SIM cards, (U)SIM card detection function and DSDS
Audio	Analog channels: • Two inputs: MIC1, MIC2 • Three outputs: speaker, earpiece, headphone
Video	• Encoding: 720P (H.264) @ 30 fps; WVGA (MPEG-4/VP8) @ 30 fps • Decoding: 1080P (H.264/MPEG-4/VP8/H.265/DivX4/5/6) @ 30 fps; WVGA (H.263) @ 30 fps
GPIO	× 25
SD Card	× 1, SD 3.0, 4-bit SDIO
I2C	× 3
General-purpose ADC	× 1
SPI	× 1, multiplexed from GPIO
PWM	× 1
Motor Drive	× 1
Keypad	PWRKEY, KEY_VOL_UP, KEY_VOL_DOWN
Antenna	× 4, main antenna, Rx-diversity antenna, GNSS antenna and Wi-Fi/BT antenna interface respectively

Smart EVB User Guide

Smart LTE Module Series

Rev. Smart_EVB_User_Guide_V1.1

Date: 2018-10-23

Status: Released



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

7th Floor, Hongye Building, No.1801 Hongmei Road, Xuhui District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://www.quectel.com/support/sales.htm>

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/technical.htm>

Or email to: support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL WIRELESS SOLUTIONS CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2018. All rights reserved

About the Document

History

Revision	Date	Author	Description
1.0	2016-09-30	Vae LIU	Initial
1.1	2018-10-23	Jerry WANG	1. Added a comment for the power supply of Smart EVB in Table 1. 2. Updated the top view of Smart EVB in Figure 1. 3. Added a comment for RESET in Chapter 2.2. 4. Added the description of a separate battery interface in Chapter 3.1. 5. Added the descriptions of touch panel interface, LCM interface, camera interfaces and SD card interface in Chapter 3.2~3.5. 6. Added the description of flashlight, vibrator and sensors in Chapter 3.13~3.15.

Contents

About the Document.....	2
Contents.....	3
Table Index.....	5
Figure Index.....	6
1 Introduction	7
1.1. Safety Information	8
2 General Overview.....	9
2.1. Key Features	9
2.2. Interface Overview.....	11
2.3. Top and Bottom Views of Smart EVB.....	13
2.4. Smart EVB Kit Accessories	14
3 Interface Application	16
3.1. Power Supply Interfaces (S801/S803)	16
3.2. Touch Panel Interface (J403)	17
3.3. LCM Interface (J402).....	18
3.4. Camera Interfaces (J301/J302).....	20
3.5. SD Card Interface (J502)	22
3.6. USB Interface (J602).....	23
3.7. Audio Interfaces (J702)	25
3.7.1. Loudspeaker Interface	25
3.7.2. Headphone Interface.....	26
3.7.3. Microphone and Earphone Interfaces.....	27
3.8. (U)SIM Interfaces (J503/J504)	28
3.9. UART Interfaces (J901/J604).....	30
3.10. Switches and Buttons.....	31
3.11. Status Indication LEDs	33
3.12. Test Points	34
3.13. Flashlight	35
3.14. Vibrator	36
3.15. Sensors.....	37
4 Operation Procedures Illustration.....	38
4.1. Power on SC20 Module	38
4.2. Power off SC20 Module	39
4.3. Communication via USB or UART Interface	39
4.3.1. Communication via USB Interface	39
4.3.2. Communication via UART Interface.....	41
4.4. Firmware Upgrade.....	42
5 EVB Accessories Assembly	44

6	Appendix A Reference.....	45
----------	----------------------------------	-----------

Table Index

TABLE 1: KEY FEATURES OF SMART EVB.....	9
TABLE 2: INTERFACES OF SMART EVB	11
TABLE 3: ACCESSORIES LIST	15
TABLE 4: PIN ASSIGNMENT OF TOUCH PANEL INTERFACE	18
TABLE 5: PIN ASSIGNMENT OF MICRO USB INTERFACE	25
TABLE 6: PIN ASSIGNMENT OF HEADPHONE INTERFACE.....	27
TABLE 7: PIN ASSIGNMENT OF (U)SIM1 INTERFACE (J503).....	29
TABLE 8: PIN ASSIGNMENT OF DEBUG UART PORT	31
TABLE 9: DESCRIPTION OF SWITCHES AND BUTTONS	32
TABLE 10: DESCRIPTION OF STATUS INDICATION LEDS	33
TABLE 11: DETAILS OF TEST POINTS	35
TABLE 12: RELATED DOCUMENTS.....	45
TABLE 13: TERMS AND ABBREVIATIONS	45

Figure Index

FIGURE 1: SMART EVB INTERFACE OVERVIEW.....	11
FIGURE 2: SMART EVB TOP VIEW	13
FIGURE 3: SMART EVB BOTTOM VIEW	14
FIGURE 4: SMART EVB KIT ACCESSORIES	14
FIGURE 5: SIMPLIFIED POWER SUPPLY SCHEMATIC OF SMART EVB.....	16
FIGURE 6: POWER SUPPLY INTERFACES.....	17
FIGURE 7: REFERENCE DESIGN FOR TOUCH PANEL INTERFACE.....	17
FIGURE 8: PIN ASSIGNMENT OF TOUCH PANEL INTERFACE	18
FIGURE 9: REFERENCE DESIGN FOR LCM INTERFACE	19
FIGURE 10: PIN ASSIGNMENT OF LCM INTERFACE	20
FIGURE 11: REFERENCE CIRCUIT DESIGN FOR CAMERA INTERFACES.....	21
FIGURE 12: CAMERA INTERFACES WITH CAMERAS ASSEMBLED	22
FIGURE 13: SIMPLIFIED INTERFACE SCHEMATIC FOR SD CARD INTERFACE	22
FIGURE 14: PIN ASSIGNMENT OF SD CARD INTERFACE.....	23
FIGURE 15: REFERENCE CIRCUIT DESIGN FOR USB INTERFACE	24
FIGURE 16: PIN ASSIGNMENT OF MICRO USB INTERFACE.....	24
FIGURE 17: REFERENCE CIRCUIT DESIGN FOR LOUDSPEAKER INTERFACE	25
FIGURE 18: REFERENCE CIRCUIT DESIGN FOR HEADPHONE INTERFACE	26
FIGURE 19: PIN ASSIGNMENT OF HEADPHONE INTERFACE	26
FIGURE 20: SKETCH OF AUDIO PLUG	27
FIGURE 21: REFERENCE CIRCUIT DESIGN FOR MICROPHONE AND EARPHONE INTERFACES	28
FIGURE 22: SIMPLIFIED INTERFACE SCHEMATIC FOR (U)SIM1 CARD CONNECTOR (J503).....	28
FIGURE 23: PIN ASSIGNMENT OF (U)SIM1 CARD CONNECTOR (J503)	29
FIGURE 24: BLOCK DIAGRAM OF DEBUG UART PORT (J604)	30
FIGURE 25: PIN ASSIGNMENT OF DEBUG UART PORT (J604).....	30
FIGURE 26: SWITCHES AND BUTTONS	32
FIGURE 27: STATUS INDICATION LEDS	33
FIGURE 28: PIN ASSIGNMENT OF J904.....	34
FIGURE 29: REFERENCE CIRCUIT DESIGN FOR FLASHLIGHT INTERFACE	35
FIGURE 30: FLASHLIGHT	36
FIGURE 31: REFERENCE CIRCUIT DESIGN FOR VIBRATOR	36
FIGURE 32: ERM-TYPE VIBRATOR	37
FIGURE 33: SENSORS	37
FIGURE 34: LCD DISPLAY INDICATING MODULE'S POWER-ON	38
FIGURE 35: LCD MENU DISPLAY FOR POWERING OFF MODULE	39
FIGURE 36: USB COM PORTS.....	40
FIGURE 37: QCOM CONFIGURATION WHEN COMMUNICATING VIA USB INTERFACE	40
FIGURE 38: USB SERIAL PORT	41
FIGURE 39: QCOM CONFIGURATION WHEN COMMUNICATING VIA UART INTERFACE.....	42
FIGURE 40: FIRMWARE UPGRADE STEPS.....	43
FIGURE 41: SMART EVB AND ACCESSORIES ASSEMBLY	44

1 Introduction

This document describes the evaluation board (Smart EVB) for Quectel Smart module SC20. The smart evaluation board is an assistant tool to develop and test SC20.

1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating SC20 module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for the customers' failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. Please comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. If the device offers an Airplane Mode, then it should be enabled prior to boarding an aircraft. Please consult the airline staff for more restrictions on the use of wireless devices on boarding the aircraft.



Wireless devices may cause interference on sensitive medical equipment, so please be aware of the restrictions on the use of wireless devices when in hospitals, clinics or other healthcare facilities.



Cellular terminals or mobiles operating over radio signals and cellular network cannot be guaranteed to connect in all possible conditions (for example, with unpaid bills or with an invalid (U)SIM) card. When emergent help is needed in such conditions, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on in a service area with adequate cellular signal strength.



The cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency signals. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.

2 General Overview

Quectel supplies Smart EVB for designers to develop applications based on Quectel SC20 module. This EVB can test basic functionalities of the module.

2.1. Key Features

The following table describes the key features of Smart EVB.

Table 1: Key Features of Smart EVB

Features	Implementation
Power Supply	- DC power supply: 4.75V~6.0V (typical: 5.0V) - VBAT: 3.5V~4.2V (typical: 3.8V)
(U)SIM Interfaces	- Support (U)SIM card detection - Support USIM/SIM cards: 2.95V and 1.8V
Audio Interfaces	Analog interfaces used for loudspeaker, microphone, earphone and headphone
Camera Interfaces	Support two cameras: - Main camera supports 8M pixels with 2-lane CSI interface - Sub camera supports 2M pixels with 1-lane CSI interface
LCM Interface	- One 5-inch 1080 × 720 HD resolution LCD 4-lane MIPI DSI interface for LCD
Touch Panel Interface	One capacitive touch panel
SD Card Interface	Support 4-bit SD card with hot-plug detection
UART Interfaces	Two UART interfaces: - Debug UART for debugging - Main UART is not used by default
USB Interface	- Compliant with USB 2.0 specifications - Support high speed and OTG function
Signal Indication	4 LEDs are available for signal indication
Buttons	9 buttons

Switches	● 4 switches
Flashlight	● Support a flashlight LED
Vibrator	● A vibrator for testing the motor drive interface of the module
Sensors	● Support three sensors including ALS/PS, G-sensor/Gyroscopic sensor and compass sensor
Physical Characteristics	● Size: 24cm × 18cm

PWRKEY	S901	Power key (push button) Used to turn on/off the module
	J903	Used to connect PWRKEY to GND
RESET ¹⁾	S908	Reset push button Used to reset the module
Micro USB	J602	USB interface
Audio	Speaker	Used for loudspeaker
	EAR	Used for earphone
	MIC	Used for microphone
	J702	Used for headphone
(U)SIM	J503	(U)SIM1 card connector
	J504	(U)SIM2 card connector
SD Card	J502	SD card connector
Camera	J302	Main camera connector, support 8M CMOS sensor
	J301	Sub camera connector, support 2M CMOS sensor
LCM	J402	Connector for LCM
TP	J403	ZIF connector for touch panel
Sensors	U205	Compass sensor
	U204	Ambient light sensor and proximity sensor
	U203	G-sensor & gyroscopic sensor
Flashlight	D202	Flashlight LED
Vibrator	U206	Vibrator for customers to test the motor driver interface
UART	J901	Main UART port
	J604	Debug UART port
LEDs	D805, D806, D807, D808	D807: network registration status indicator D806: power supply status indicator D808/D805: disabled by default
TE-A	J101, J102	Connectors for connecting Smart TE-A and Smart EVB

DC interface	J807	Used to connect to DC power adapter
--------------	------	-------------------------------------

NOTE

1) The “**RESET**” button does not work, because the RESET interface on SC20 module is disabled by default. Through enabling the RESET interface via software configuration, the “**RESET**” button can work properly.

2.3. Top and Bottom Views of Smart EVB

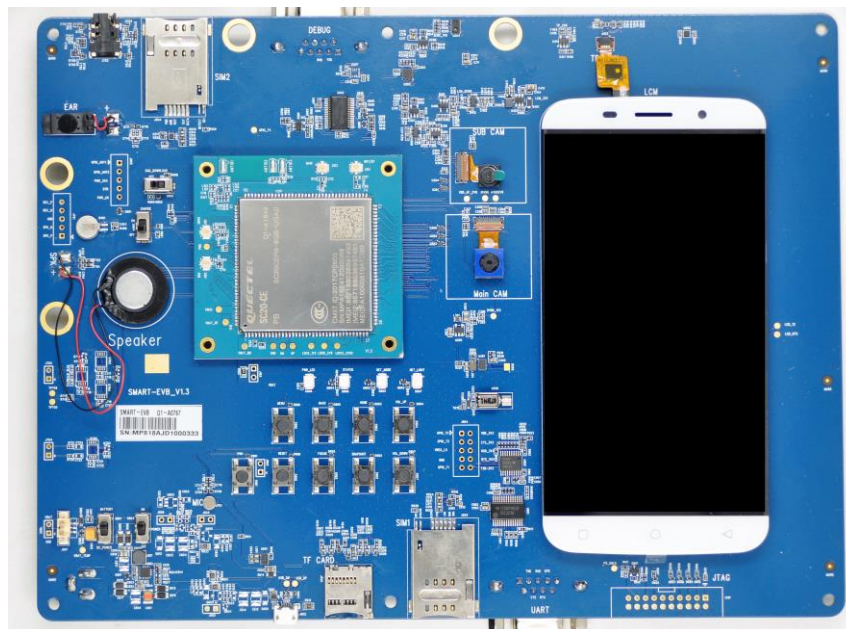


Figure 2: Smart EVB Top View

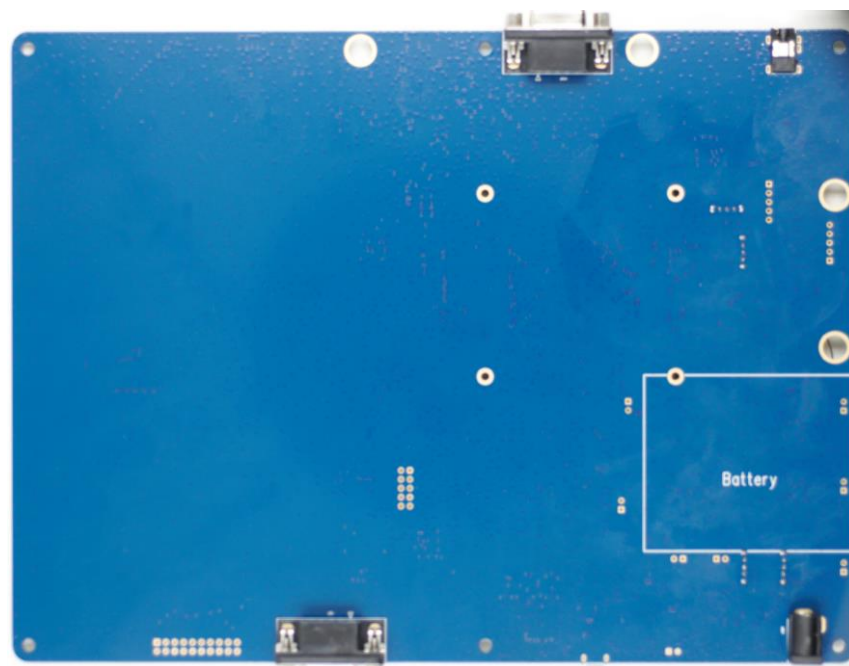


Figure 3: Smart EVB Bottom View

2.4. Smart EVB Kit Accessories

All accessories of the Smart EVB kit are listed as below. Please contact the supplier if there is something missing.



Figure 4: Smart EVB Kit Accessories

Table 3: Accessories List

Items	Description	Quantity
Cables	USB to UART converter cable	1
	USB cable	1
	RF cables	4
Antennas	Main antennas ¹⁾	2
	Wi-Fi antenna	1
	GNSS antenna (active)	1
Audio	Headphone	1
USB Flash Drive	USB2.0 to RS232 driver, USB driver, etc.	1
Others	Bolts and coupling nuts for fixing Smart EVB	4 for each

NOTE

¹⁾ The main antenna can also be used for diversity reception.

3 Interface Applications

This chapter describes the hardware interfaces of Smart EVB, shown as follows:

- Power supply interfaces
- Touch panel interface
- LCM interface
- Camera interfaces
- SD card interface
- USB interface
- Audio interfaces
- (U)SIM interfaces
- UART interfaces

It also provides information about LEDs, buttons, test points, flashlight, vibrator and sensors to help customers use the Smart EVB.

3.1. Power Supply Interfaces (S801/S803)

The Smart EVB can be powered by an external 5.0V DC power adapter. Connect the DC power adapter to the DC interface (J807) and then the step-down converter (DC-to-DC converter), which is used to provide the supply voltage required for operating the module.

A separate battery interface (J801) is provided, in case there are no other power options available. The following figures show the simplified power supply block diagram and power supply interfaces of Smart EVB.

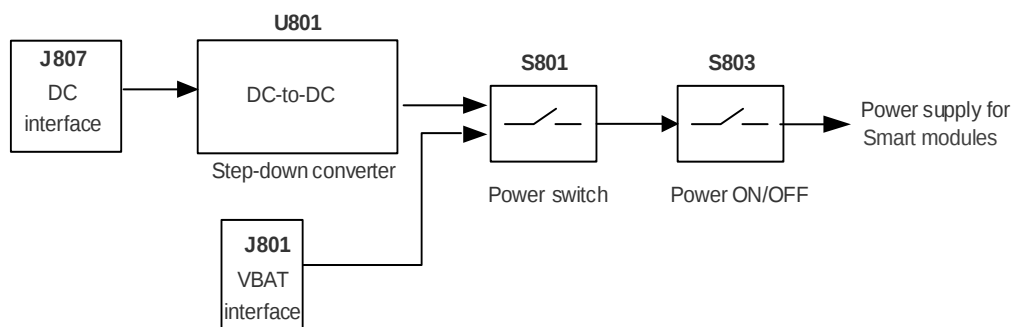


Figure 5: Simplified Power Supply Schematic of Smart EVB

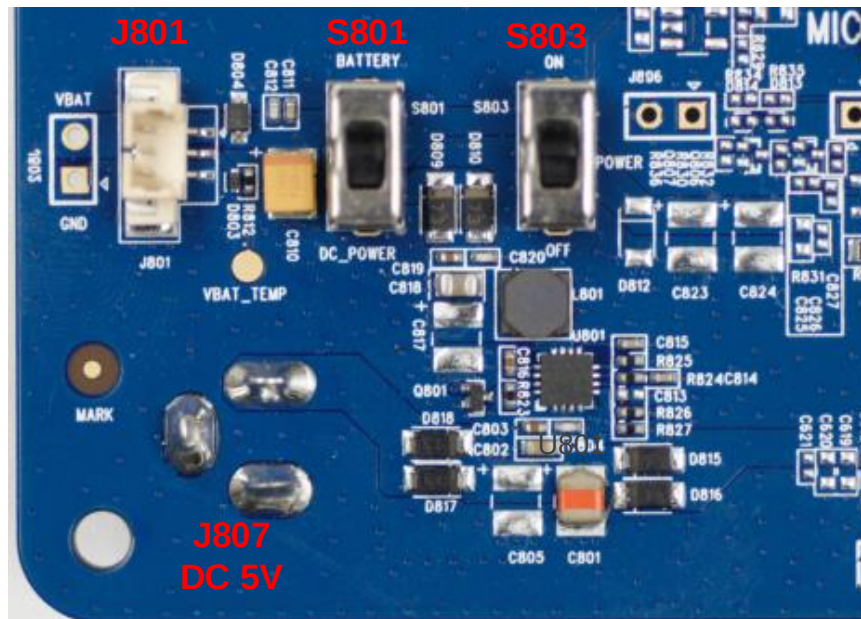


Figure 6: Power Supply Interfaces

3.2. Touch Panel Interface (J403)

Smart EVB provides a touch panel interface J403, which is used for the connection between touch panel of LCM and EVB. The following figure shows a reference design for touch panel interface.

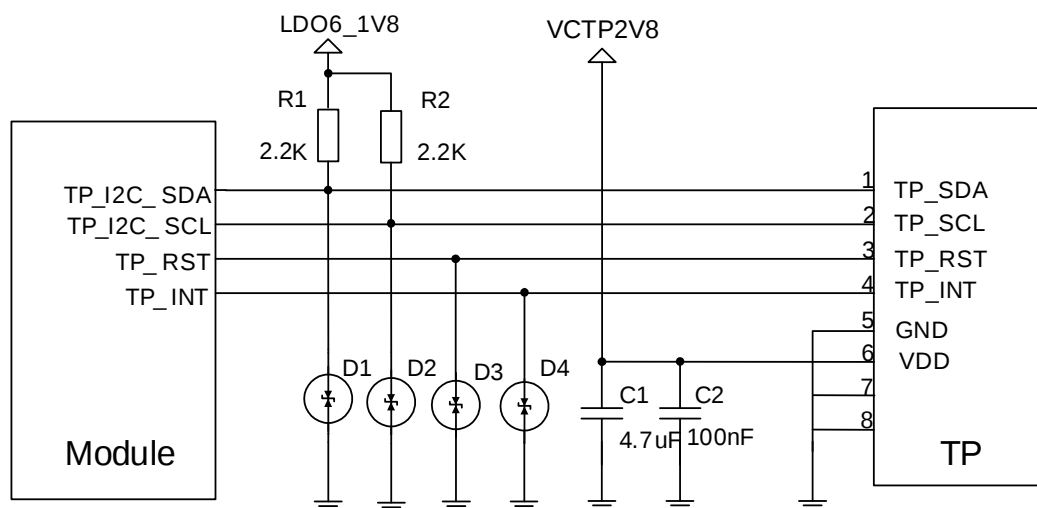


Figure 7: Reference Design for Touch Panel Interface

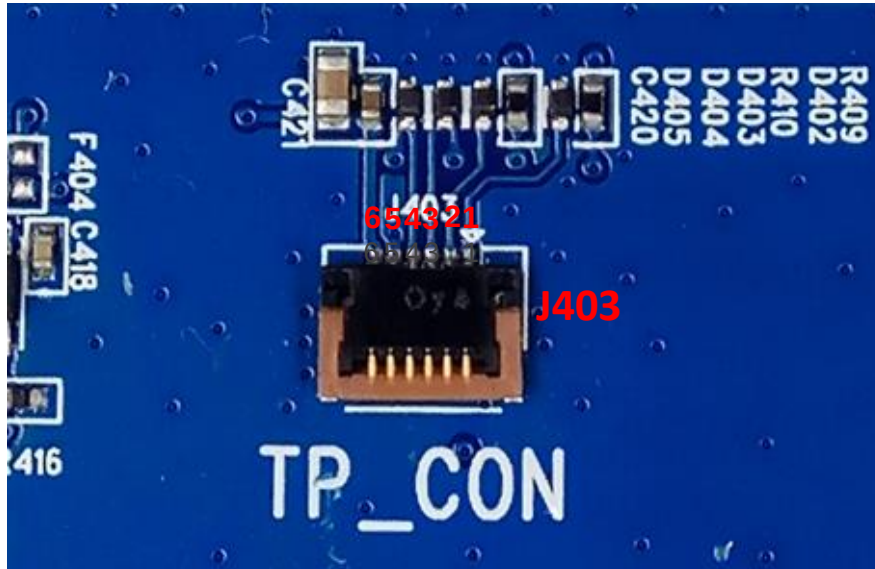


Figure 8: Pin Assignment of Touch Panel Interface

Table 4: Pin Assignment of Touch Panel Interface

Pin No.	Pin Name	Description
1	TP_SDA	I2C data signal of touch panel
2	TP_SCL	I2C clock signal of touch panel
3	TP_RST	Reset signal of touch panel
4	TP_INT	Interrupt signal of touch panel
5	GND	Ground
6	VDD	2.8V power supply for touch panel VDD power

3.3. LCM Interface (J402)

Currently the smart EVB provides a 5-inch 1080 x 720 high-definition resolution LCD display for customers to test. The following figure shows a reference circuit design for LCM interface of the Smart EVB.

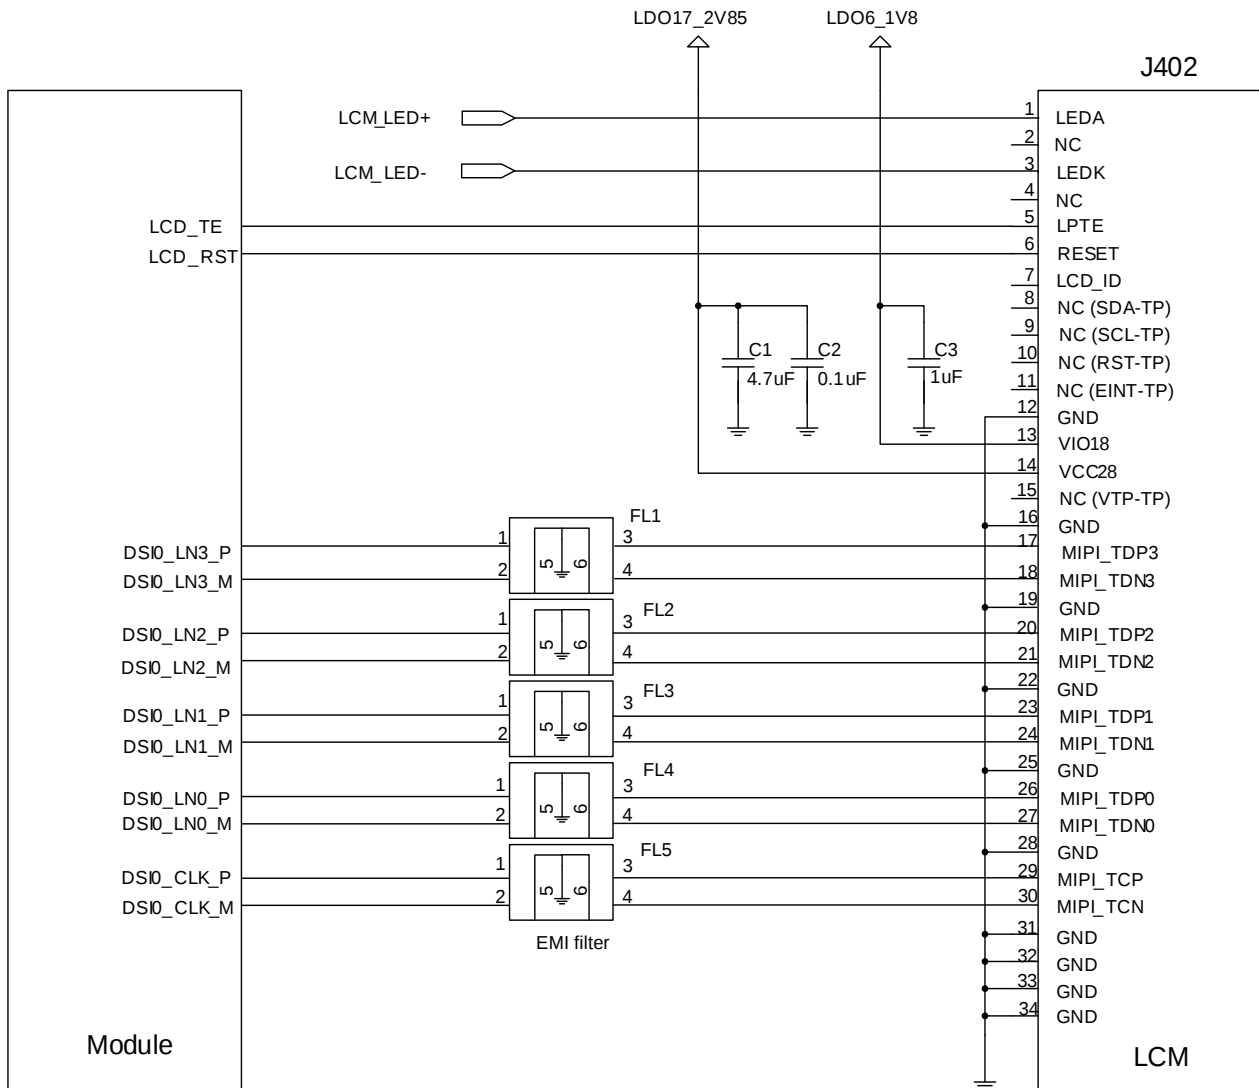


Figure 9: Reference Design for LCM Interface

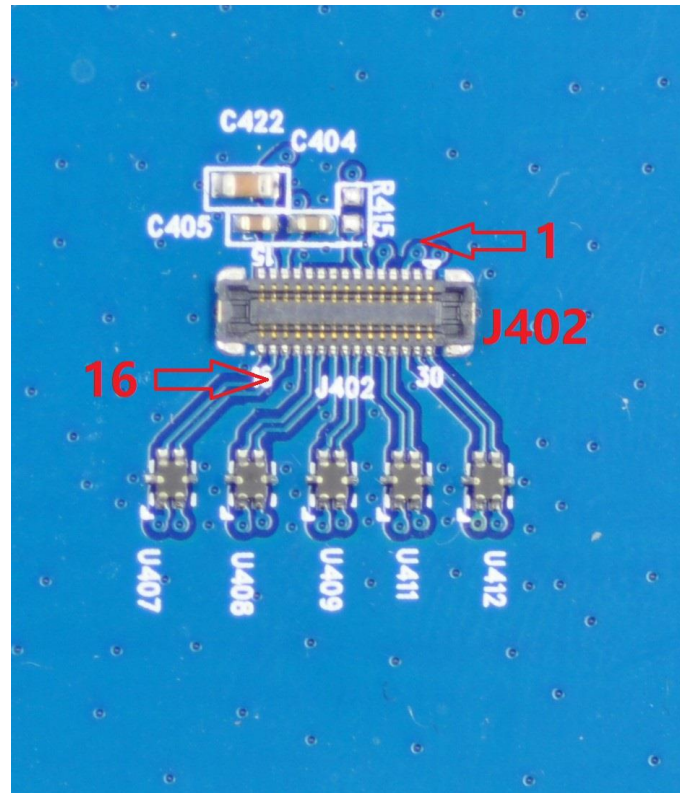


Figure 10: Pin Assignment of LCM Interface

3.4. Camera Interfaces (J301/J302)

Smart EVB provides two camera interfaces (2-lane+1-lane) with main camera and sub camera assembled.

- The main camera uses an 8M pixels digital CMOS sensor with auto-focusing function.
- The sub camera uses a 2M pixels CMOS sensor.

The following figure shows a reference circuit design for camera interfaces.

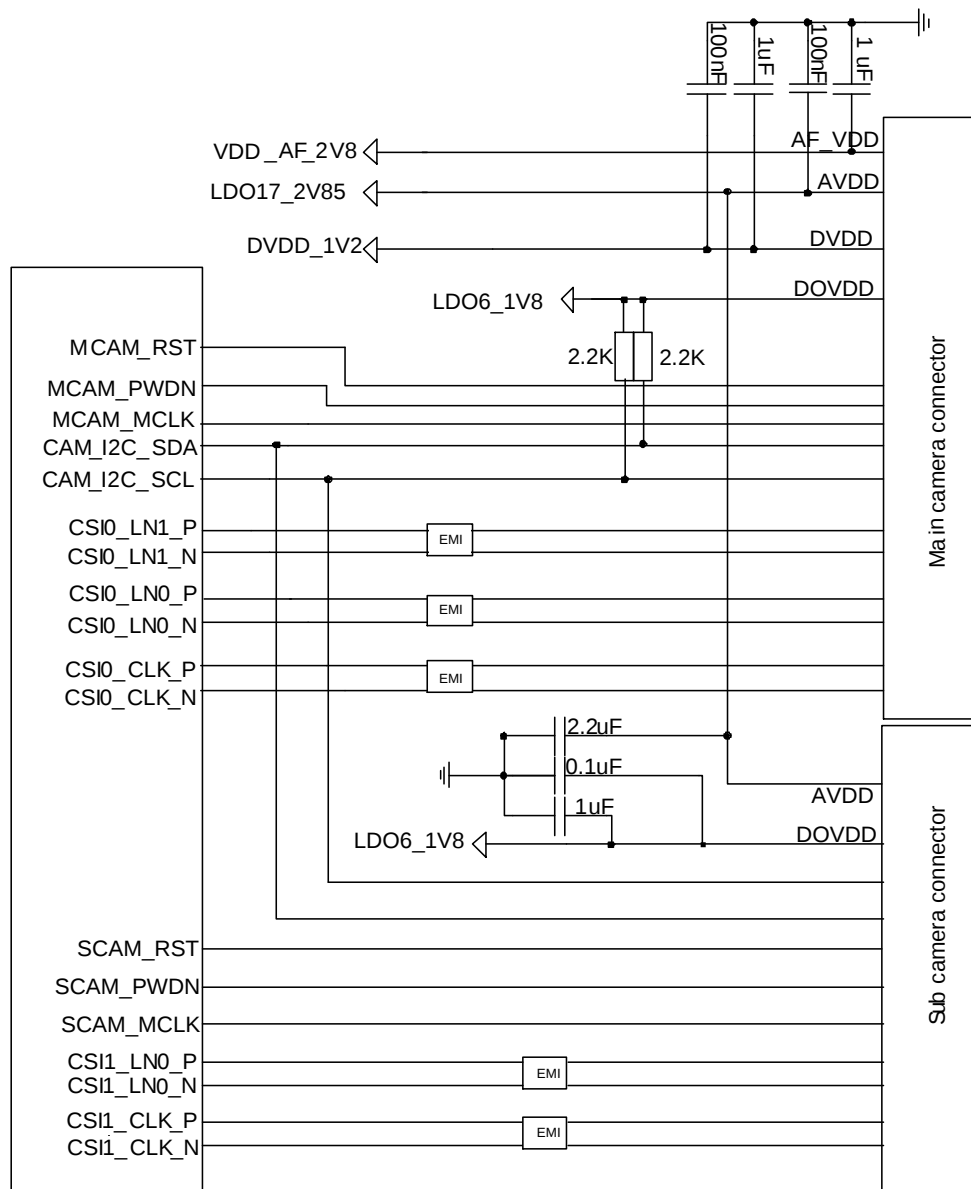


Figure 11: Reference Circuit Design for Camera Interfaces

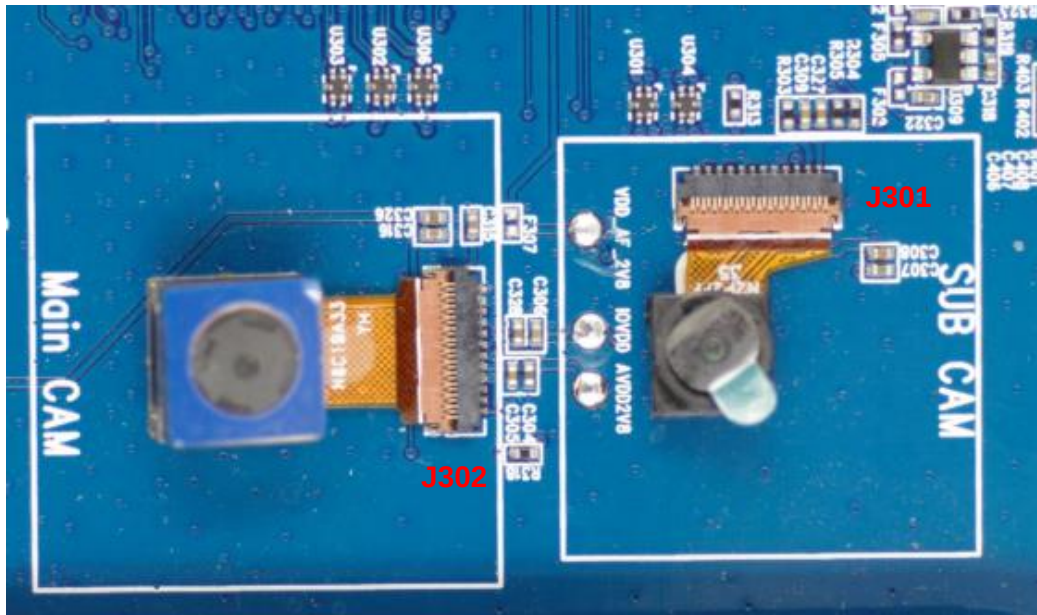


Figure 12: Camera Interfaces with Cameras Assembled

3.5. SD Card Interface (J502)

Smart EVB provides an SD card interface (J502) for customers to test the module's SD card interface. The following figure shows the simplified interface schematic for SD card interface on Smart EVB.

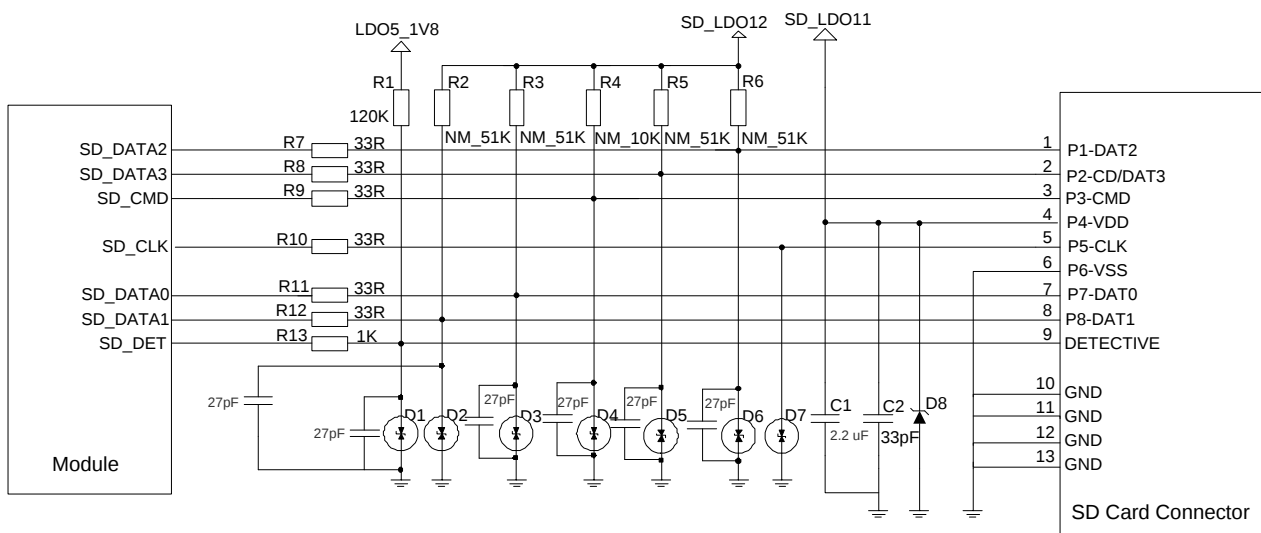


Figure 13: Simplified Interface Schematic for SD Card Interface



The reference circuit design for Micro USB interface is shown in the following figure and the pin assignment of it is listed in the table below.

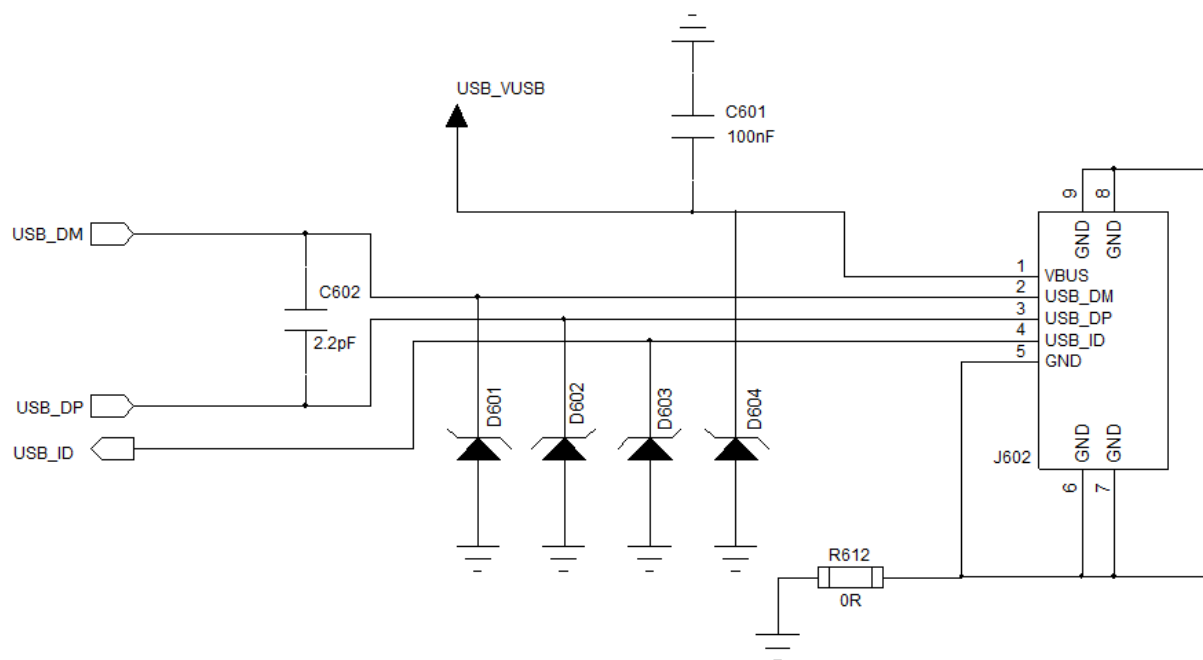


Figure 15: Reference Circuit Design for USB Interface

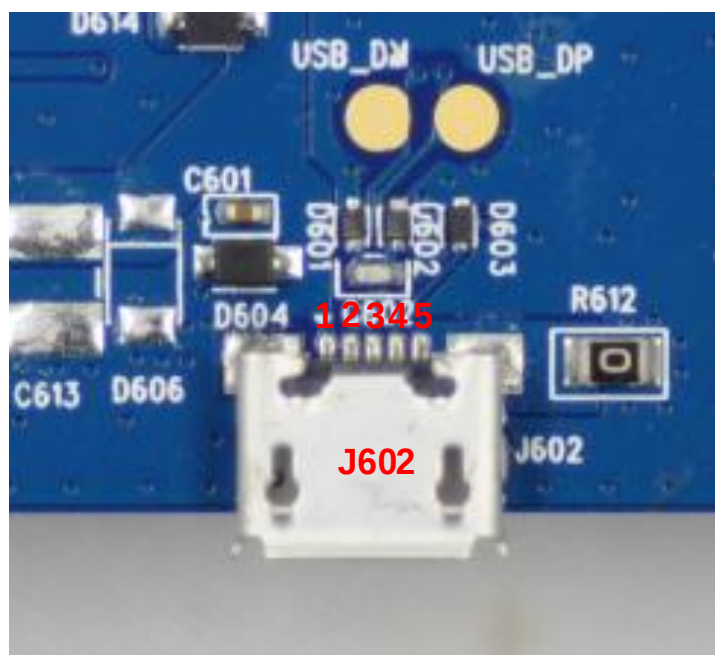


Figure 16: Pin Assignment of Micro USB Interface

Table 5: Pin Assignment of Micro USB Interface

Pin No.	Pin Name	Description
1	USB_VBUS	Used for USB detection and power supply of OTG equipment
2	USB_DM	USB serial differential bus (minus)
3	USB_DP	USB serial differential bus (plus)
4	USB_ID	USB serial ID signal
5	GND	GND for USB interface

NOTE

The USB_DP and USB_DM data lines are connected directly to the module.

3.7. Audio Interfaces (J702)

Smart EVB provides four audio interfaces, including loudspeaker, headphone, earphone and microphone interfaces.

3.7.1. Loudspeaker Interface

Loudspeaker is soldered onto the Smart EVB via TP701 and TP702. The following figure shows the reference circuit design for loudspeaker interface.

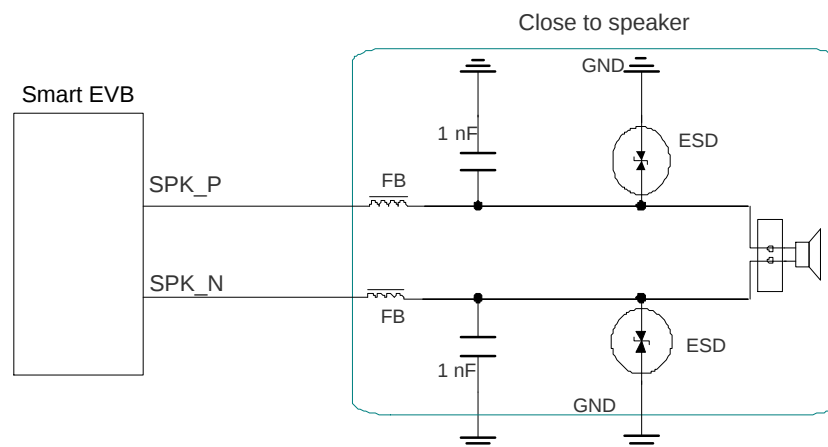


Figure 17: Reference Circuit Design for Loudspeaker Interface

Table 6: Pin Assignment of Headphone Interface

Pin No.	Pin Name	Description
1	MIC	Positive microphone input
2	GND	Dedicated GND for audio
3	R-AUDIO	Headphone right channel
4	DETECT	Headphone detection
5	L-AUDIO	Headphone left channel
6	GND	Dedicated GND for audio

The following figure shows the sketch design of audio plug which suits for the audio jack on Smart EVB.

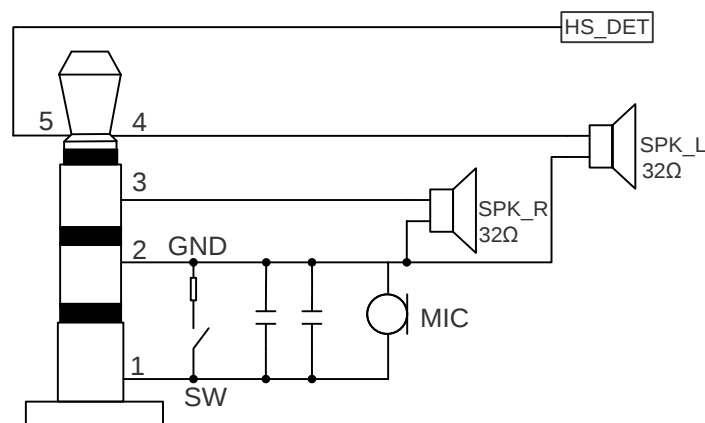


Figure 20: Sketch of Audio Plug

3.7.3. Microphone and Earphone Interfaces

Smart EVB provides a microphone interface and an earphone interface. The following figure shows the reference circuit design for microphone and earphone interfaces.

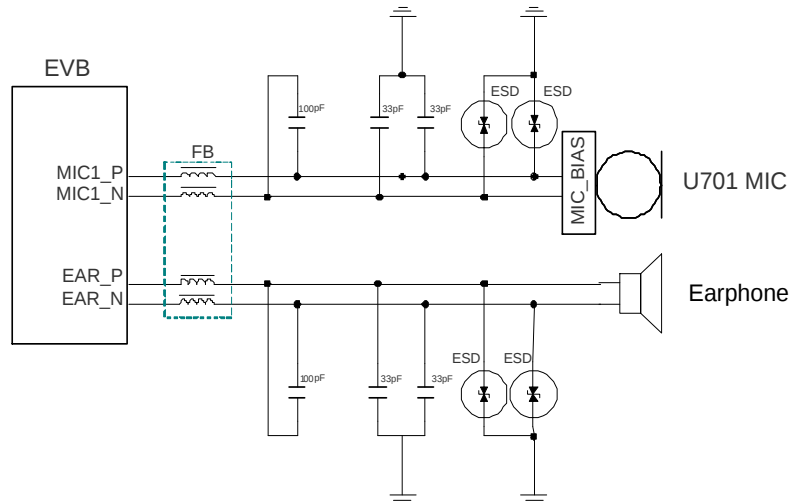


Figure 21: Reference Circuit Design for Microphone and Earphone Interfaces

3.8. (U)SIM Interfaces (J503/J504)

The Smart EVB provides the following two (U)SIM card (2.95V or 1.8V) connectors:

- J503: (U)SIM1 card connector
- J504: (U)SIM2 card connector

The following figure shows the simplified interface schematic for J503.

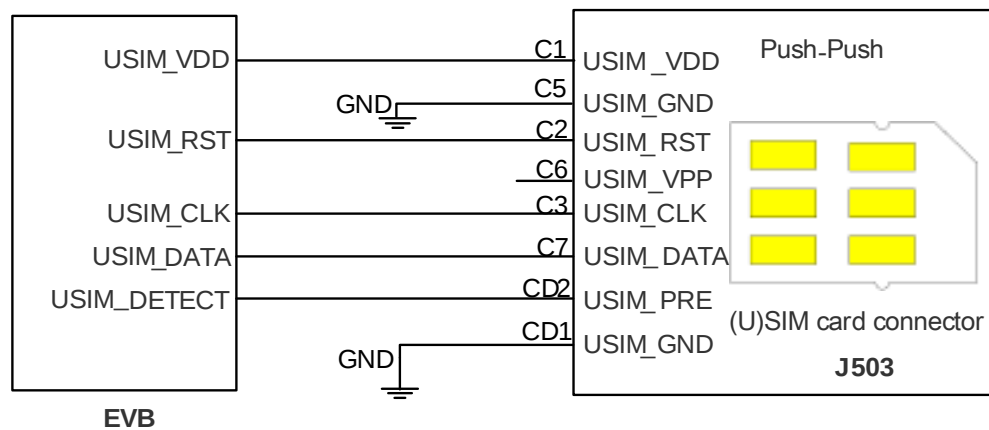


Figure 22: Simplified Interface Schematic for (U)SIM1 Card Connector (J503)

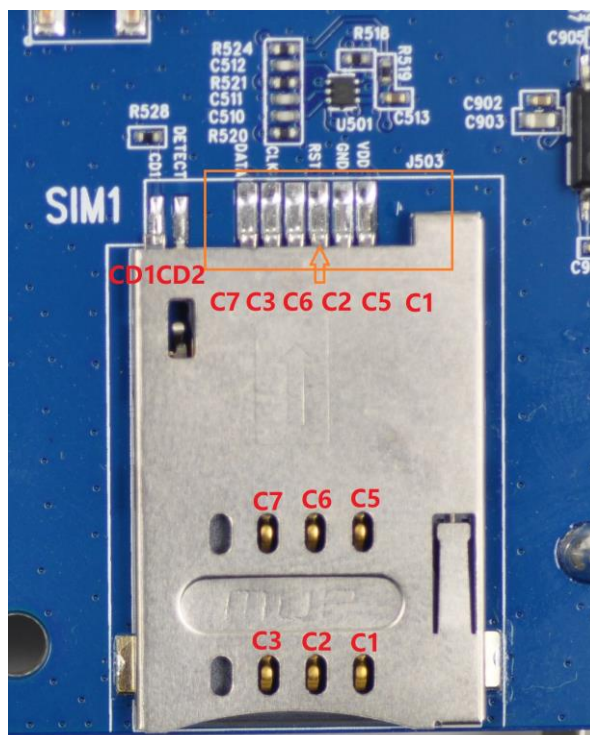


Figure 23: Pin Assignment of (U)SIM1 Card Connector (J503)

Table 7: Pin Assignment of (U)SIM1 Interface (J503)

Pin No.	Pin Name	I/O	Description
C1	USIM_VDD	O	(U)SIM1 card power supply
C2	USIM_RST	O	(U)SIM1 card reset signal
C3	USIM_CLK	O	(U)SIM1 card clock signal
C5	GND		Ground
C6	VPP		Not connected
C7	USIM_DATA	I/O	Bi-directional data line
CD1	GND	GND	Ground
CD2	USIM_DETECT	I	(U)SIM1 card detection

NOTE

The pin assignment of (U)SIM2 interface (J504) is the same as that of (U)SIM1 interface (J503).

3.9. UART Interfaces (J901/J604)

Smart EVB provides two UART interfaces: main UART port J901 and debug UART port J604. The debug UART interface is intended for data transmission and AT command communication. And the main debug UART interface is not used by default.

The following figure and table show the block diagram of debug UART port J604 and the pin assignment of it.

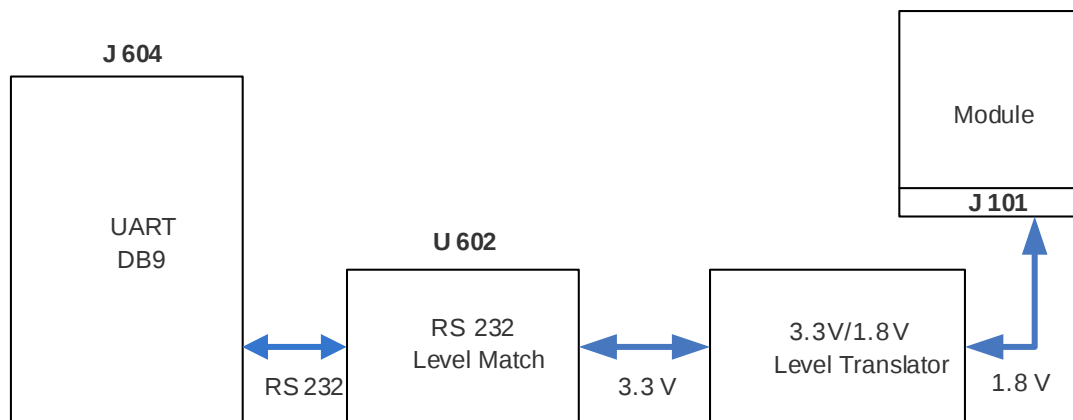


Figure 24: Block Diagram of Debug UART Port (J604)



Figure 25: Pin Assignment of Debug UART Port (J604)

Table 8: Pin Assignment of Debug UART Port (J604)

Pin No.	Pin Name	I/O	Description
1			Not connected
2	RS232_TXD	O	Transmit data
3	RS232_RXD	I	Receive data
4			Not connected
5	RS232_GND		Ground
6			Not connected
7			Not connected
8			Not connected
9			Not connected

3.10. Switches and Buttons

Smart EVB provides four switches (S801/S802/S803/S804) and nine buttons (S901/S902/S903/S904/S905/S906/S907/S908/S909).



Items	Description
S801	Used to select DCDC power supply or battery power supply
S802	Used to force the module to boot from USB port Turned off by default
S803	Used to power on/off the module
S804	Used to turn on/off battery charger Turned off by default
S901	Power key (push button) Used to turn on/off the module
S902	Snapshot button Used to snapshot photos
S903	Home button

	Used to enter home page
S904	Volume up button Used to increase volume
S905	Focus button Used to focus during shooting photos
S906	Menu button
S907	Volume down button Used to lower volume
S908	Reset push button Used to reset the module
S909	Back button Used to return to the previous page

3.11. Status Indication LEDs

There are four LED status indication lights (D805, D806, D807 and D808) on the Smart EVB, which are shown as below.

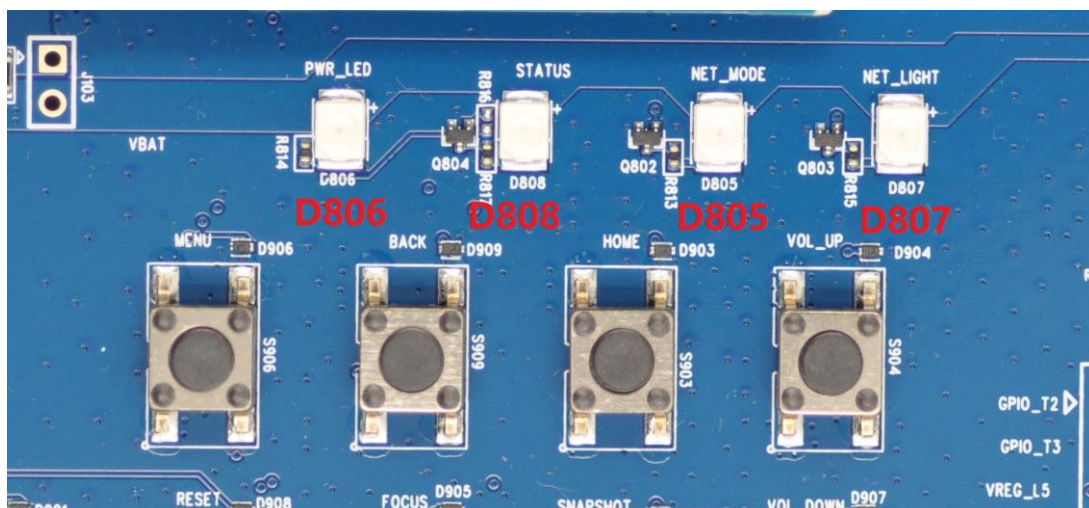


Figure 27: Status Indication LEDs

Table 10: Description of Status Indication LEDs

Items	Description
D806	Indicate the power supply status of SC20 module

	Bright: VBAT ON Extinct: VBAT OFF
D808, D805	Disabled by default
D807	Indicate the network registration status of SC20 Bright: Registered on Network Extinct: Not Registered on Network

3.12. Test Points

J904 consists of 10 test points. The details are shown in the following figure and table.

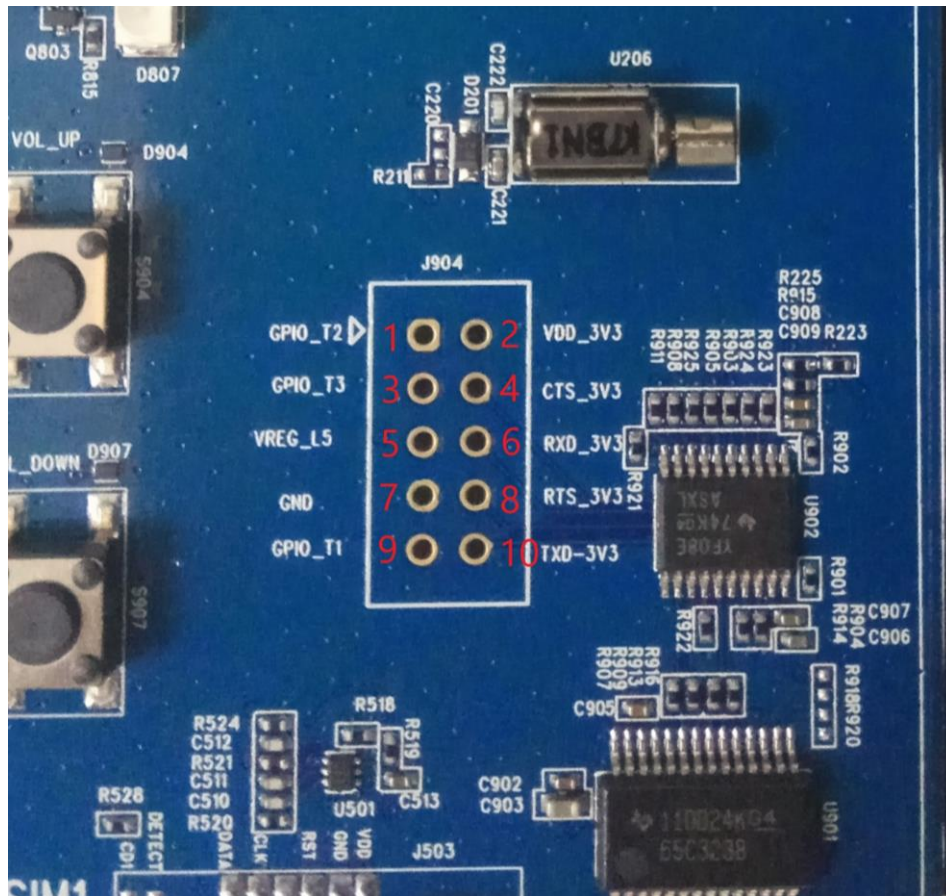


Figure 28: Pin Assignment of J904

Pin No.	Pin Name	Description
1	GPIO_T2	GPIO_68 test point
2	VDD_3V3	3.3V power supply of EVB
3	GPIO_T2	GPIO_69 test point
4	CTS_3V3	3.3V CTS signal
5	VREG_L5	LDO5_1V8 power supply of the module
6	RXD_3V3	3.3V RXD signal
7	GND	Ground
8	RTS_3V3	3.3V RTS signal
9	GPIO_T1	GPIO_14 test point
10	TXD_3V3	3.3V TXD signal

The Smart EVB provides a flashlight LED D202, for testing the module's flashlight interface which supports flash mode and torch mode. The following figures show a reference circuit design for flashlight and its location on Smart EVB.



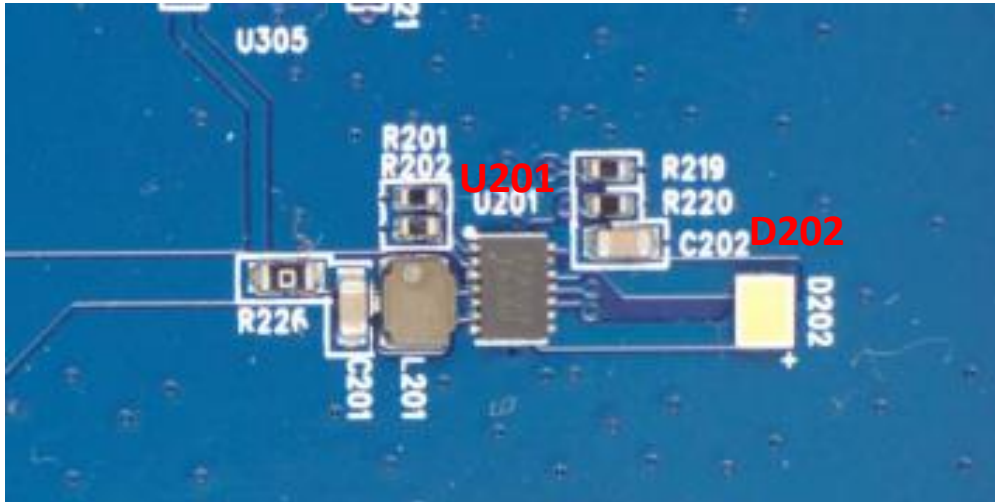


Figure 30: Flashlight

3.14. Vibrator

The Smart EVB provides an ERM-type vibrator for customers to test the motor driver interface of SC20 module. The following figures show the reference circuit design of the vibrator and its location on the board.

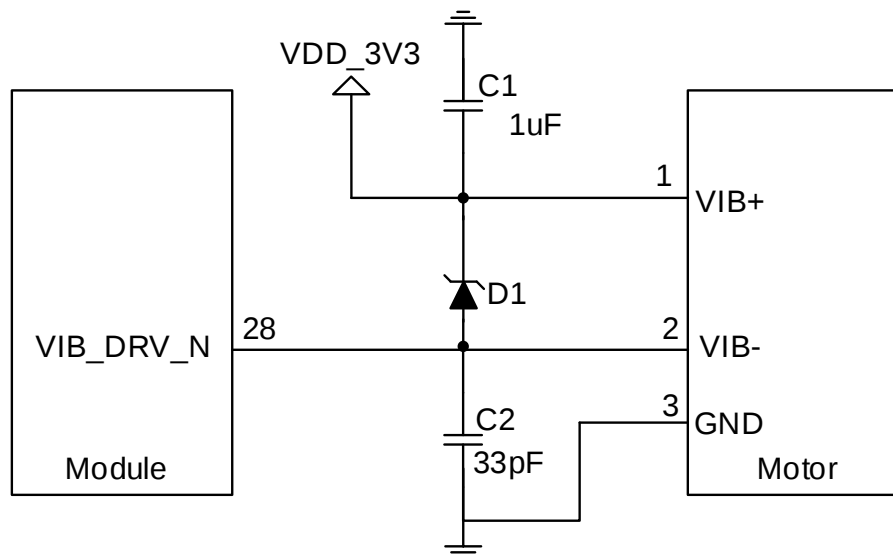


Figure 31: Reference Circuit Design for Vibrator

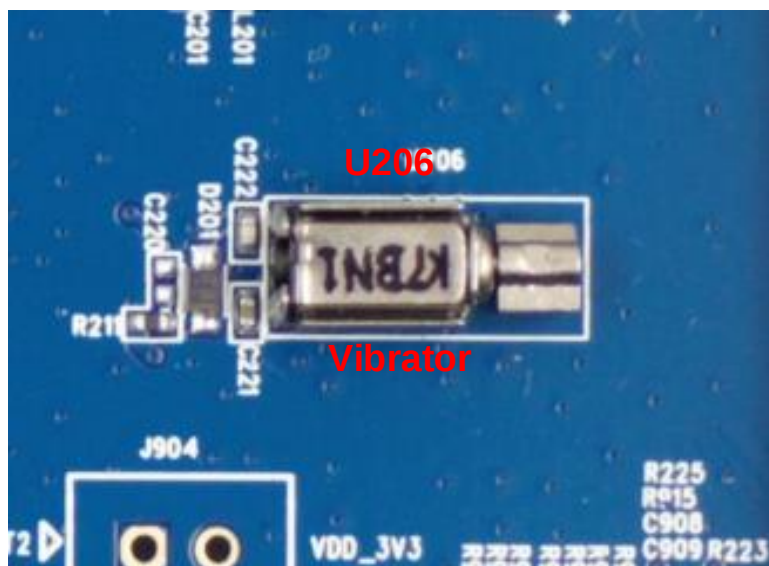


Figure 32: ERM-Type Vibrator

3.15. Sensors

Smart EVB provides three sensors for testing purpose, as shown in the figure below.



Figure 33: Sensors

4 Operation Procedures

This chapter introduces how to use the Smart EVB for testing and evaluating Quectel SC20 module.

4.1. Power on SC20 Module

The following are the procedures for powering on SC20 module.

1. Connect the TE-A to the connectors (J101 and J102) on smart EVB.
2. Connect the DC adapter and pull S801 to **DC POWER** state.
3. Pull S803 to **ON** state, and then D806 will be lighted.
4. Press the S901 (**PWRKEY**) for at least 2s to turn on the module. When the following interface is displayed on the LCD, it means the booting has been completed.



Figure 34: LCD Display Indicating Module's Power-on

4.2. Power off SC20 Module

There are two methods to power off the module. One is to operate via the system. The steps are shown as follows.

1. Press S901 (**PWRKEY**) for at least 1s under power on state, and then LCM will display a menu as shown in the following figure.

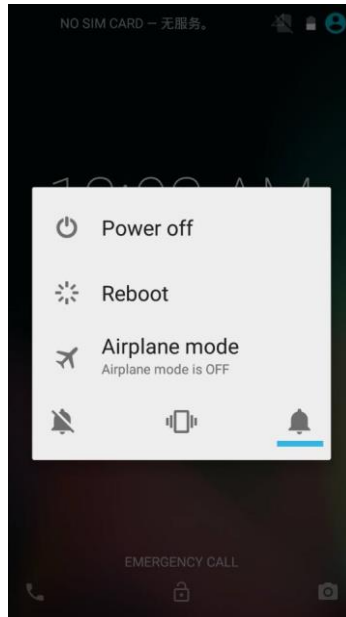


Figure 35: LCD Menu Display for Powering off Module

2. Choose “**Power off**”.
3. The module will be powered off.

Another way is to press down S901 (**PWRKEY**) until the module is shut down.

4.3. Communication via USB or UART Interface

4.3.1. Communication via USB Interface

1. Power on the module according to the procedures mentioned in **Chapter 4.1**.
2. Connect Smart EVB and PC with USB cable through USB interface and install USB driver from the USB Flash drive. The USB port numbers can be viewed through the PC's Device Manager.

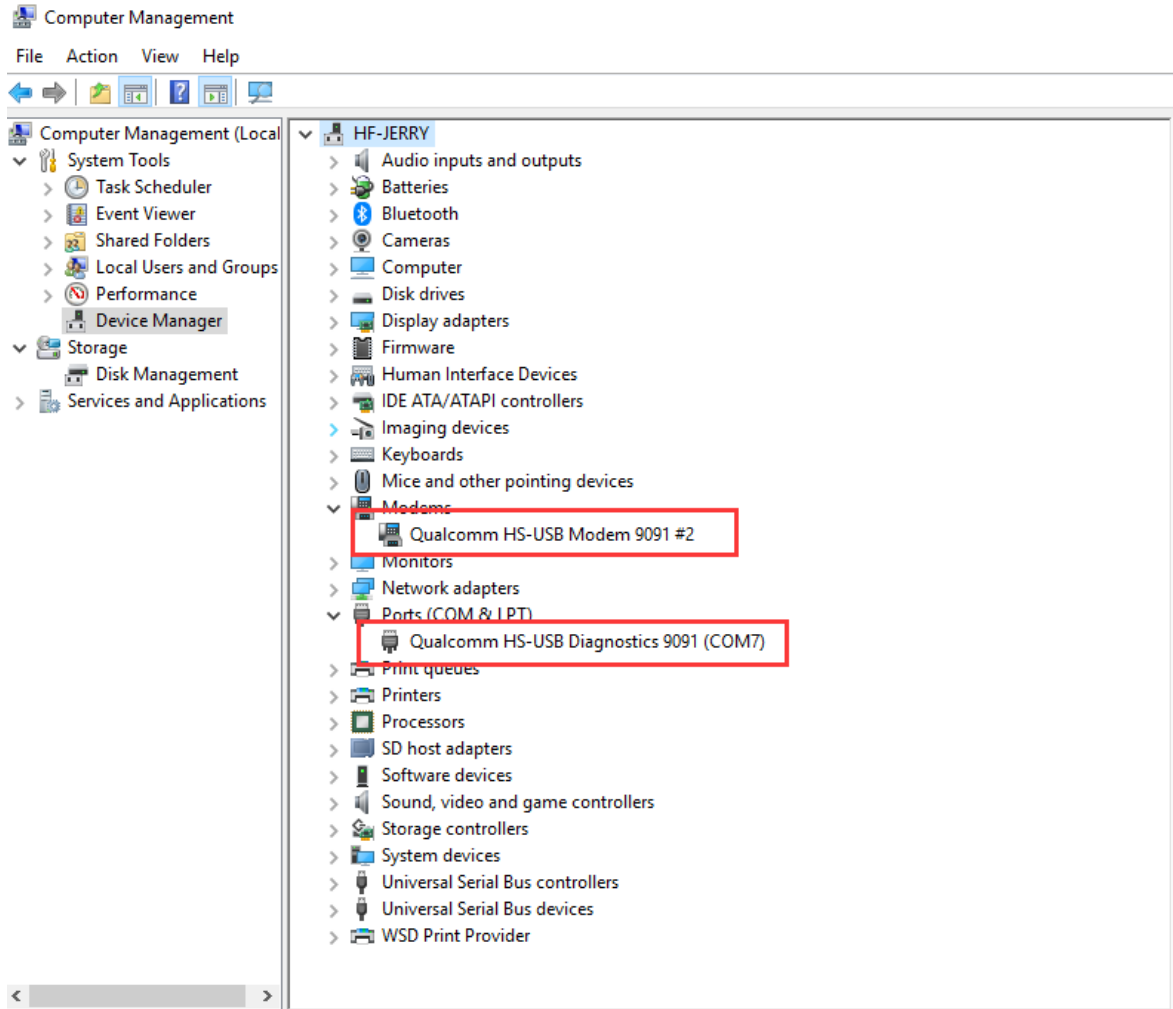


Figure 36: USB COM Ports

3. Install and then use the QCOM tool provided by Quectel to realize the communication between the smart module and the PC. The following figure shows the QCOM configuration: select correct “**COM port**” and set correct “**Baudrate**” (such as 115200bps). For more details about QCOM tool usage and configuration, please refer to *document [2]*.

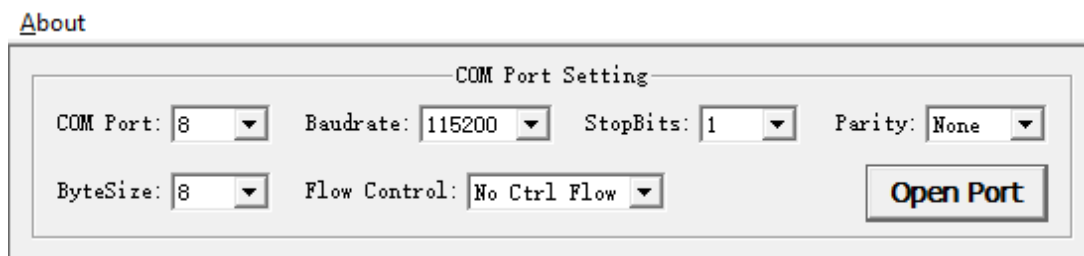


Figure 37: QCOM Configuration When Communicating via USB Interface

4.3.2. Communication via UART Interface

1. Run the driver disk on PC to install the USB-to-RS232 driver.
2. Connect the UART interface (main UART or debug UART) to the PC with USB-to-RS232 converter cable and then power on the module according to the procedures mentioned in **Chapter 4.1**. After that, the USB serial port number can be viewed through the PC Device Manager, shown as the following figure.

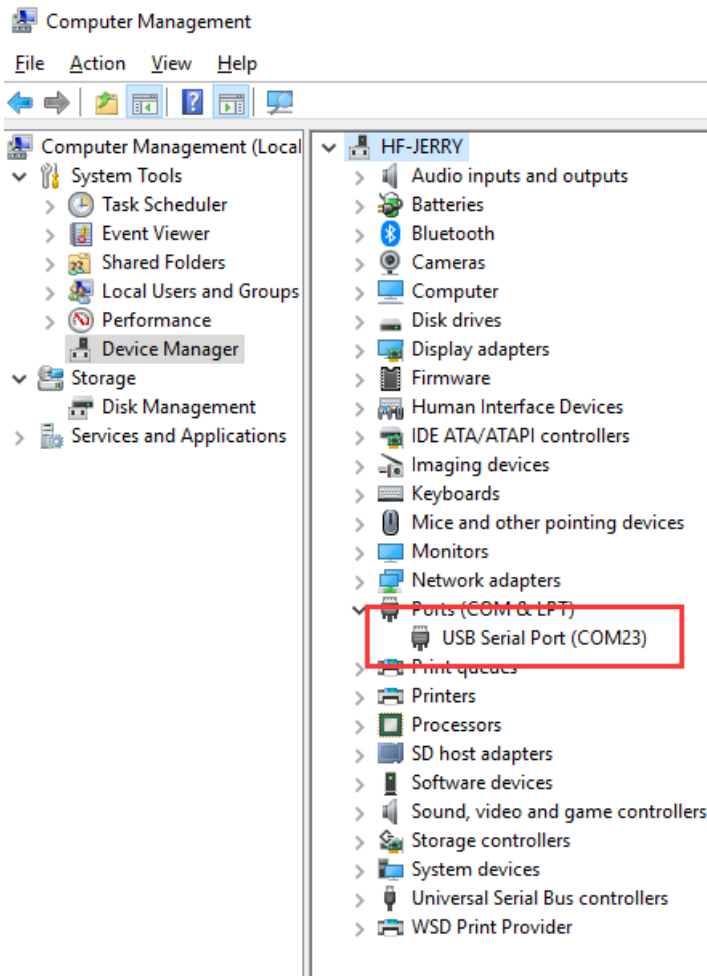


Figure 38: USB Serial Port

3. Install and then use the QCOM tool provided by Quectel to realize the communication between the smart module and the PC. The following figure shows the QCOM configuration: select correct “**COM port**” (USB Serial Port) and set correct “**Baudrate**” (such as 115200bps). For more details about QCOM tool usage and configuration, please refer to **document [2]**.

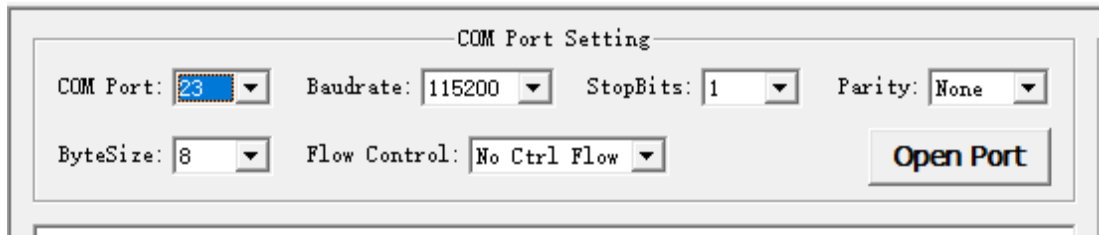


Figure 39: QCOM Configuration When Communicating via UART Interface

4.4. Firmware Upgrade

Quectel SC20 module upgrade firmware via USB port by default. Please follow the procedures below to upgrade firmware.

1. Open the firmware upgrade tool **QFIL** on PC and then power on SC20 module according to the procedures mentioned in **Chapter 4.1**.
2. Click the “**SelectPort**” and select the USB port “**Qualcomm HS-USB Diagnostics Modem 9091 (COM24)**”.
3. Select “**Flat Build**” in “**Select Build Type**” option.
4. Click “**Browse**” to select the firmware which needs to be upgraded in “**Select Programmer**” option”.
5. Click “**Load XML**” to select the XML which needs to be upgraded in “**Select Build**” option.
6. Click “**Download**” to upgrade the firmware.

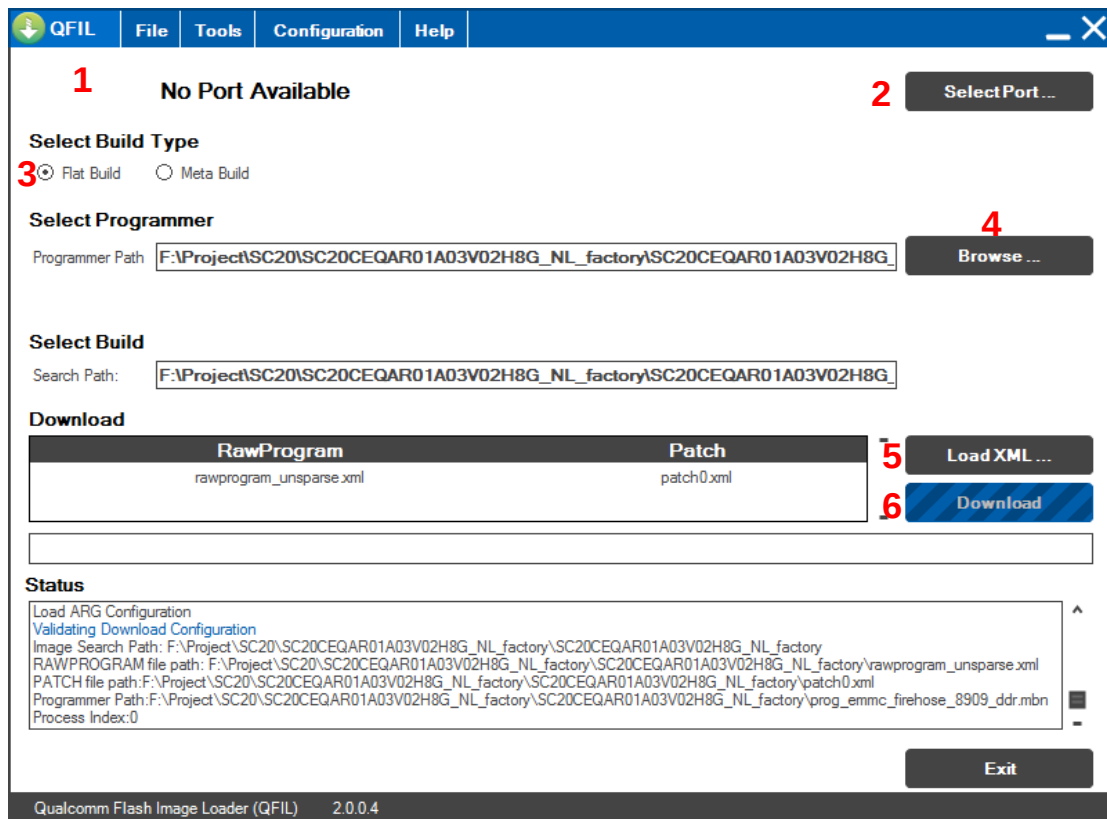


Figure 40: Firmware Upgrade Steps

5 EVB Accessories Assembly



Figure 41: Smart EVB and Accessories Assembly

6 Appendix A Reference

Table 12: Related Documents

SN	Document name	Remark
[1]	Quectel_SC20_Hardware_Design	SC20 hardware design
[2]	Quectel_QCOM_User_Guide	User guide for QCOM tool

Table 13: Terms and Abbreviations

Abbreviation	Description
EVB	Evaluation Board
OTG	On-The-Go
PC	Personal Computer
SIM	Subscriber Identity Module
USIM	Universal Subscriber Identity Module