

# Class J modular ferrule and knifeblade fuse blocks





# **Catalog symbol:**

JM60\_

#### **Description:**

Bussmann® series Class J modular fuse blocks increase versatility, reduce labor and enhance safety for any panel or electrical system design. Available for the full Class J fuse amp range.

These fuse blocks feature a standard fuse clip reinforcing spring for enhanced electrical contact between the block and fuse. All blocks are available as single-pole versions that snap together for the required number of poles, or as factory configured 2-, and 3-pole versions to meet stocking requirements.

The modular design permits reducing inventory, assembly time and labor with tool-less assembly of multiple poles at point of use.

Ferrule fuse blocks up to 60 amps save panel space with the smallest width dimension on the market and feature DIN-Rail and panel mount versatility so that one product can be used for multiple applications with lower inventory cost.

Knifeblade fuse blocks from 100 to 600 amps feature phase barriers between poles for additional safety with up to four mounting holes per pole increase installation flexibility. All knifeblade blocks meet UL creep and clearance requirements for Industrial Power Circuits (UL 508 and UL 845).

Additionally, the 200 to 600 amp blocks meet the higher UL creep and clearance requirements for Power Distribution Standards (UL 98, UL 67, UL 489, UL 891 and UL 869A)

All blocks have optional IP20 finger-safe high clarity, see-through covers for inspecting wire terminations or thermography measurements without removal. All covers enhance safety by featuring probe holes for easier, safer testing and a lockout/tagout capability. These covers also have optional open fuse indication to speed troubleshooting.

Easy circuit identification is available for 30 and 60 amp blocks and covers with universal marker labels.

# **Specifications:**

### **Ratings**

- Volts 600 V
- Amps up to 600 A
- Withstand 200 kA RMS Sym

#### **Agency information**

- · Blocks:
  - UL® Listed E14853 IZLT and IZLT7
  - CSA® Certified 47235-6225-01
  - CE
  - RoHS Compliant
  - REACH declaration available upon request
- · Covers:
  - UL Listed E58836 JDVS
  - CSA Certified 47235-6225-01 (30 and 60A)
  - RoHS Compliant
  - REACH declaration available upon request



#### Technical Data 10488

#### Effective August 2017

#### **Poles**

- 1-, 2-, 3-pole units factory assembled
- Single-pole units snap together to create desired number of poles

#### Flammability ratings

Blocks: UL 94V0, self-extinguishingCovers: UL 94HB, self-extinguishing

#### Operating and storage temperature range

- Blocks -40°C to +120°C
- · Covers;
  - Non-Indicating -40°C to +120°C
  - Indicating -20°C to +90°C\*
- \* Indication requires minimum 90V and closed circuit to illuminate.

#### **Materials**

- · Base: Thermoplastic
- Terminals:
  - Tin-plated copper brass (30 and 60A)
  - Tin-plated aluminum (box lug)
- Covers: Thermoplastic

#### **Conductors**

• See catalog numbers for details and torque specifications.

#### Modular Class J ferrule and knifeblade fuse blocks




30 and 60 amp ferrule fuse blocks have DIN-rail and panel mounting capability, the modular designs allows blocks toand snap together for the desired number of poles. They accept optional snap-on covers for IP20 finger-safe protection and feature a lockout/tagout to improve electrical safety.



100 to 600 amp knifeblade fuse blocks are panel mount with multiple holes for installation flexibility and the modular design allows blocks to snap together for the desired number of poles. They accept optional snap-on covers for IP20 finger-safe protection and feature a lockout/tagout provision to improve electrical safety.

### Class J modular ferrule and knifeblade fuse blocks

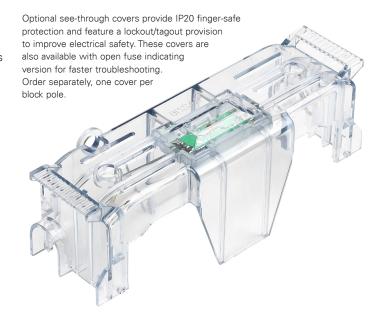



Standard dual lugs on 600A blocks and optional dual lugs on 400A blocks for easier wiring using two, smaller conductors.



On blocks rated from 100 to 600A, the optional covers can be completely removed for servicing or simply hinged open.

Table 1: 30 and 60 amp block catalog numbers

Fuse		Terminal type				Optional covers*	
amp range	Poles	Box lug/slot screw	Box lug/hex screw	#10-32 Phil-slot screw	Pressure plate	Indicating**	Non-indicating
	1	JM60030-1CR	JM60030-1CHR	JM60030-1SR	JM60030-1PR		
up to 30	2	JM60030-2CR	JM60030-2CHR	JM60030-2SR	JM60030-2PR	CVRI-J-60030	CVR-J-60030
	3	JM60030-3CR	JM60030-3CHR	JM60030-3SR	JM60030-3PR	_	
	1	JM60060-1CR	JM60060-1CHR				
35 to 60	2	JM60060-2CR	JM60060-2CHR	_	_	CVRI-J-60060	CVR-J-60060
	3	JM60060-3CR	JM60060-3CHR	_			

Covers sold separately, one cover per pole.

Table 2: 30 and 60 amp block terminals and conductors


Terminal type	AWG type/range	AWG	Torque N•m (lb-in)
		2-3	5.6 (50)
Box lug	75°C Cu 2-14,	4-6	5.1 (45)
box lug	Cu 2-14, AL 2-8	8	4.5 (40)
		10-14	4.0 (35)
#10-32 Phil-slot screw	75/90°C Cu 10-18	10-18	2.3 (20)
Pressure plate			

#### **Recommended Bussmann series fuses:**

Description	Amps	Data sheet no.
Ultimate protection Low-Peak LPJ time- delay fuses	up to 60	1006
Advanced protection Limitron JKS fast- acting fuses	up to 60	1026
High speed DFJ drive fuse	up to 60	1048

#### Recommended accessories for 30 and 60 amp blocks:


Description	Catalog no.
DIN Pail and atoms	BRKT-ND
DIN-Rail end stops	BRKT-NDSCREW2
Marker labels	TM26CB

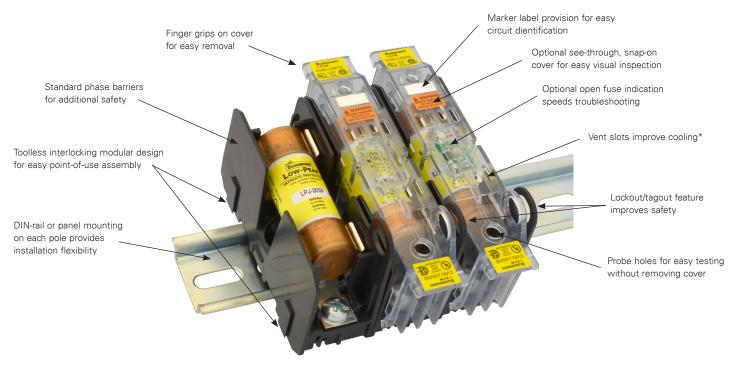


<sup>\*</sup>No fuse derating necessary.

<sup>\*\*</sup> Open fuse indication requires 90 volts minimum and closed circuit to operate.


# Dimensions; 30A Class J block - in (mm)

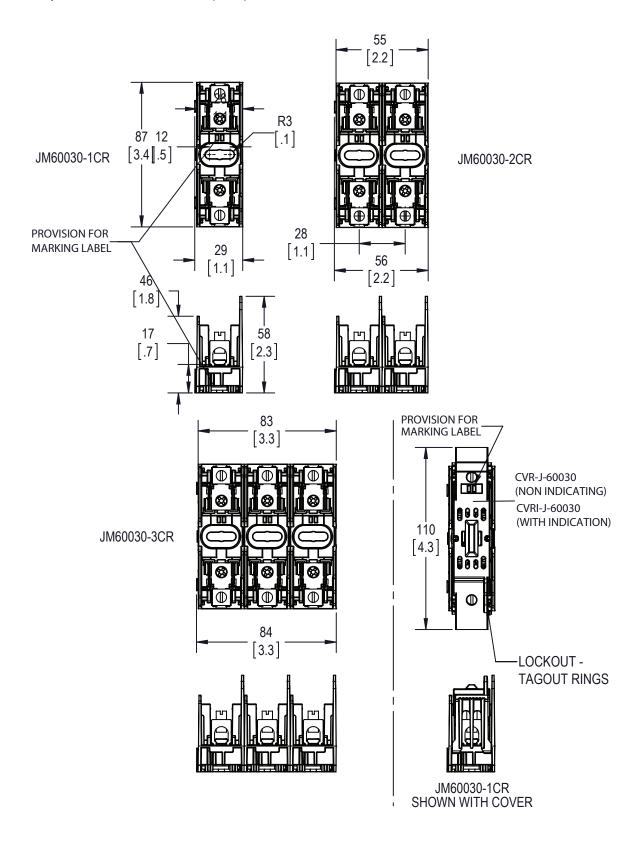


# Dimensions; 60A Class J block - in (mm)

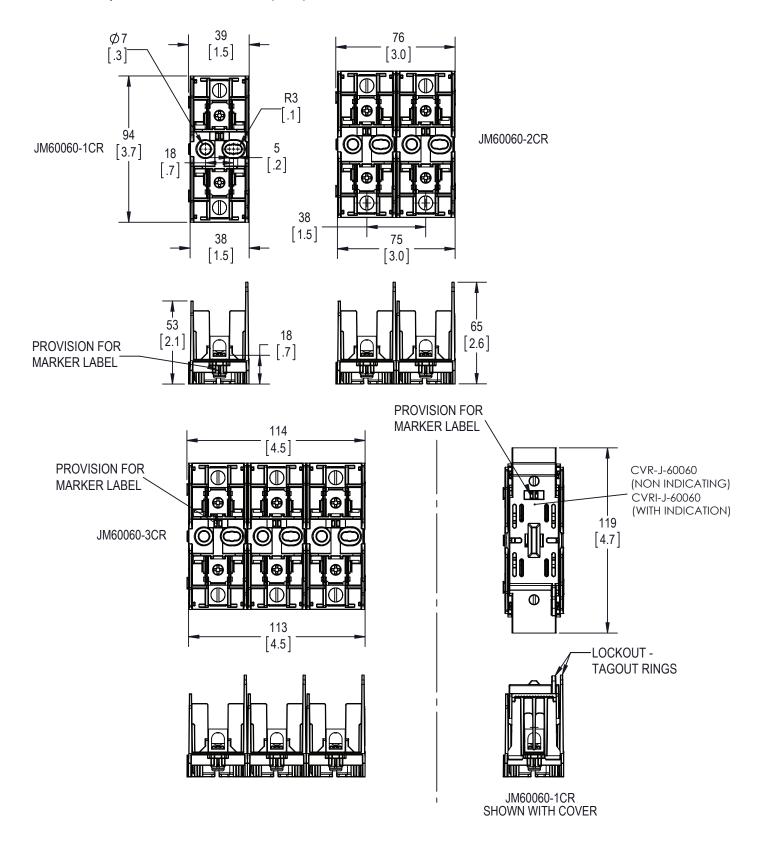

Effective August 2017

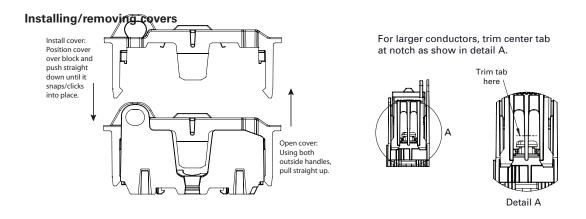

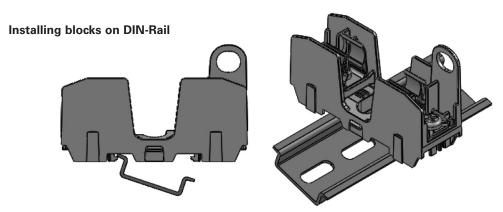

Place one edge of DIN-Rail in fuse block base, then rotate block down until it clicks into place.



Table 6: Class J 100 to 600 amp knifeblade blocks and covers


Fuse			Covers*		Conductors***		
amp range	Poles	Catalog nos.	Non-indicating	Indicating**	Solid and stranded	Fine stranded	Torque N•m (lb-in)
	1	JM60100-1CR			_	Cu 1-3 AWG	6.2 (55)
		JIVIOUTUU-TCh			1/0-3 AWG; (2) Cu 4-6 AWG	Cu 4-6 AWG	5.6 (50)
70-100	2	JM60100-2CR	CVR-J-60100	CVRI-J-60100	2 4-6 AWG; (2) Cu 8 AWG	Cu 8 AWG	5.1 (45)
	۷	310100100-2011			8 AWG; (2) Cu 10-14 AWG	_	4.5 (40)
	3	JM60100-3CR	<del></del>		Cu 10-14 AWG; AI 10-12 AWG	_	4.0 (35)
	1	JM60200-1CR			250kcmil-1 AWG	Cu 3/0-1 AWG	42 (375)
110-200	2	JM60200-2CR	CVR-J-60200	CVRI-J-60200	2-6 AWG; (2) Cu 2-6 AWG	Cu 2-6 AWG	31 (275)
	3	JM60200-3CR	_				
	1	JM60400-1CR		CVRI-J-60400	600kcmil		57 (500)
	2	JM60400-2CR			500kcmil-4 AWG		51 (450)
225-400	3	JM60400-3CR				N1/A	
225-400	1	JM60400-1MW22	— CVR-J-60400		(2) Cu 3/0 - 4 AWG	N/A	57 (500)
	2	JM60400-2MW22	<del></del>		(2) Al 3/0 - 4 AWG		34 (300)
	3	JM60400-3MW22	_				
	1	JM60600-1CR					
450-600	2	JM60600-2CR	CVR-J-60600	CVRI-J-60600	2 (2) 500kcmil-4 AWG	N/A	51 (450)
	3	JM60600-3CR	_				

<sup>\*</sup> Covers sold separately.

# \*\*\* Ratings for copper and aluminum conductors except where otherwise noted.

#### **Recommended Bussmann series fuses**


Description	Amps	Data sheet no.
Ultimate protection Low-Peak LPJ time- delay fuses	70 to 600	1007
Advanced protection Limitron JKS fast- acting fuses	70 to 600	1026
High speed DFJ drive fuse	70 to 600	1048

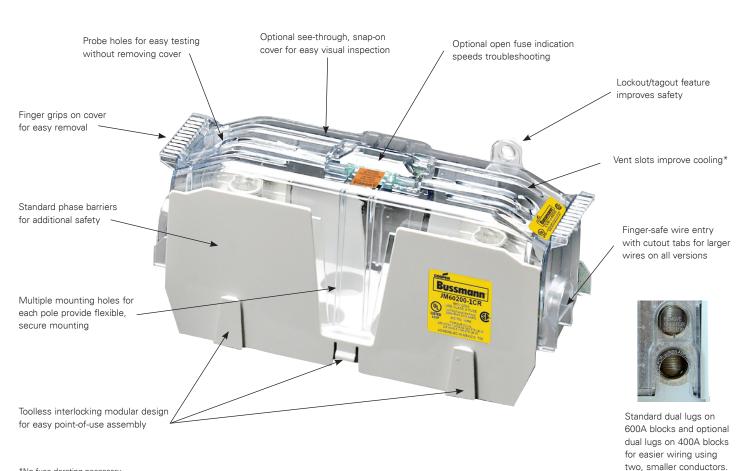


<sup>\*</sup>No fuse derating necessary.

<sup>\*\*</sup> Open fuse indication requires 90 volts minimum and closed circuit to operate.


# Dimensions; 100A Class J block - in (mm)

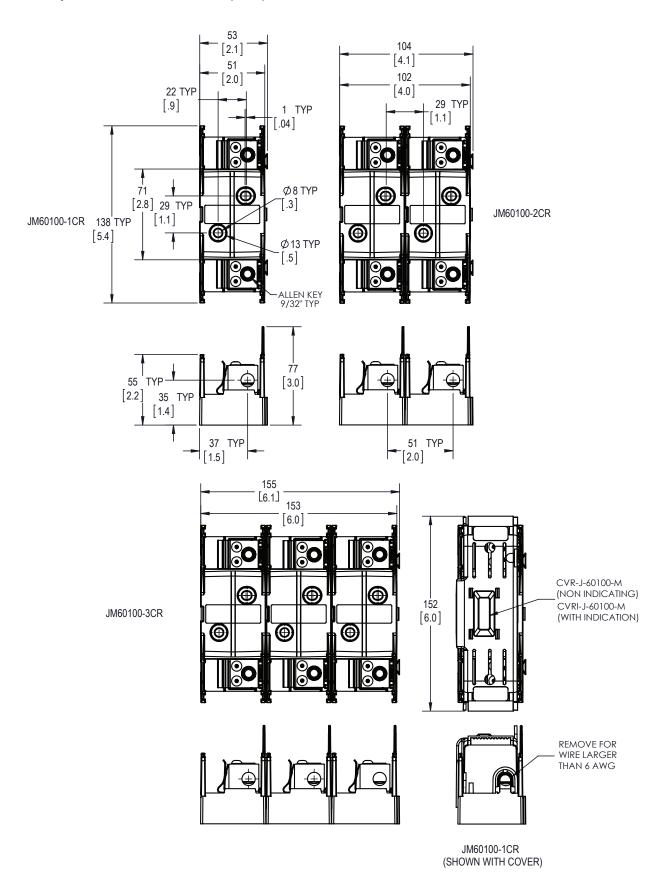


# Dimensions; 200A Class J block - in (mm)

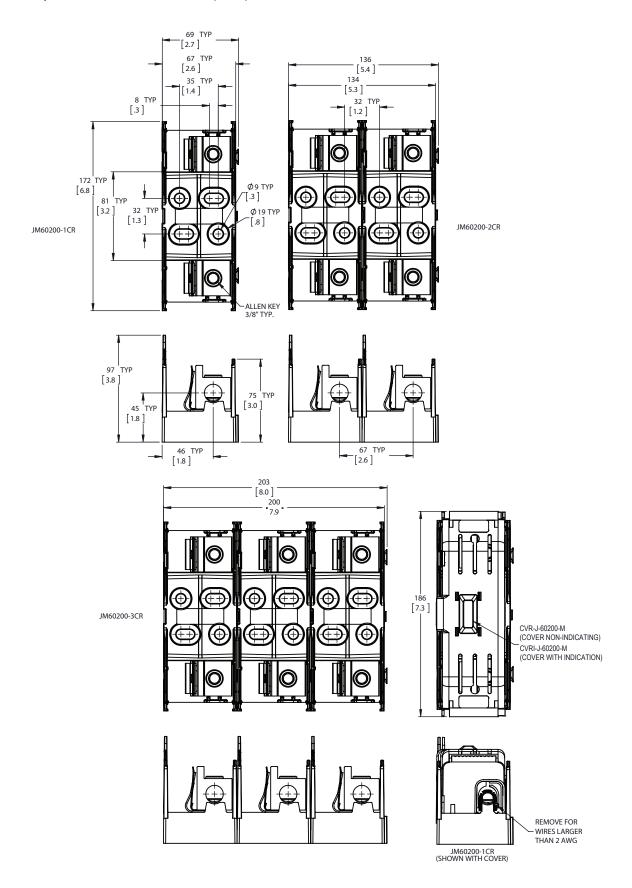

# Dimensions; 400A Class J block - in (mm)

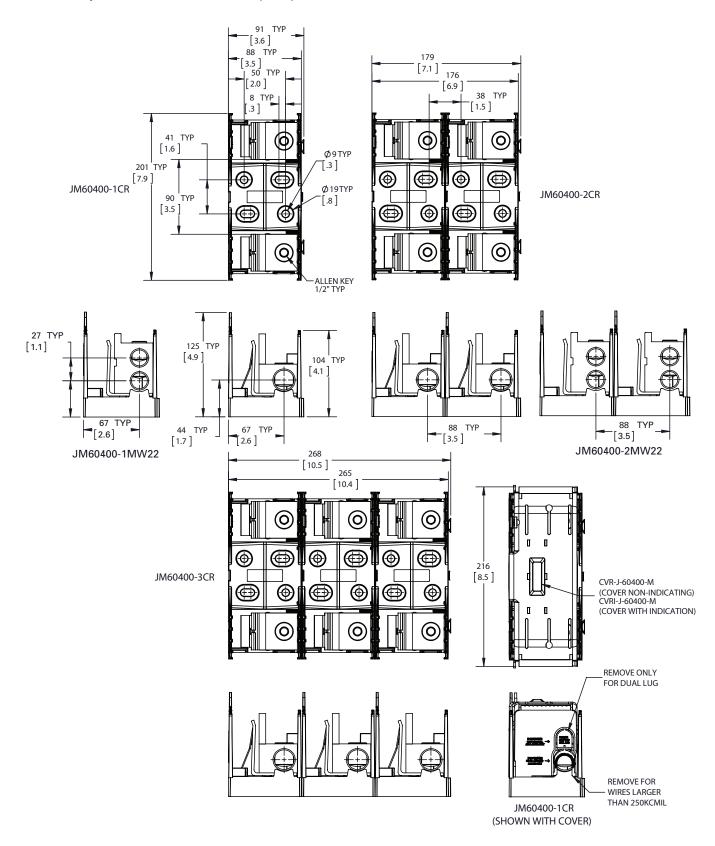

# Dimensions; 600A Class J block - in (mm)

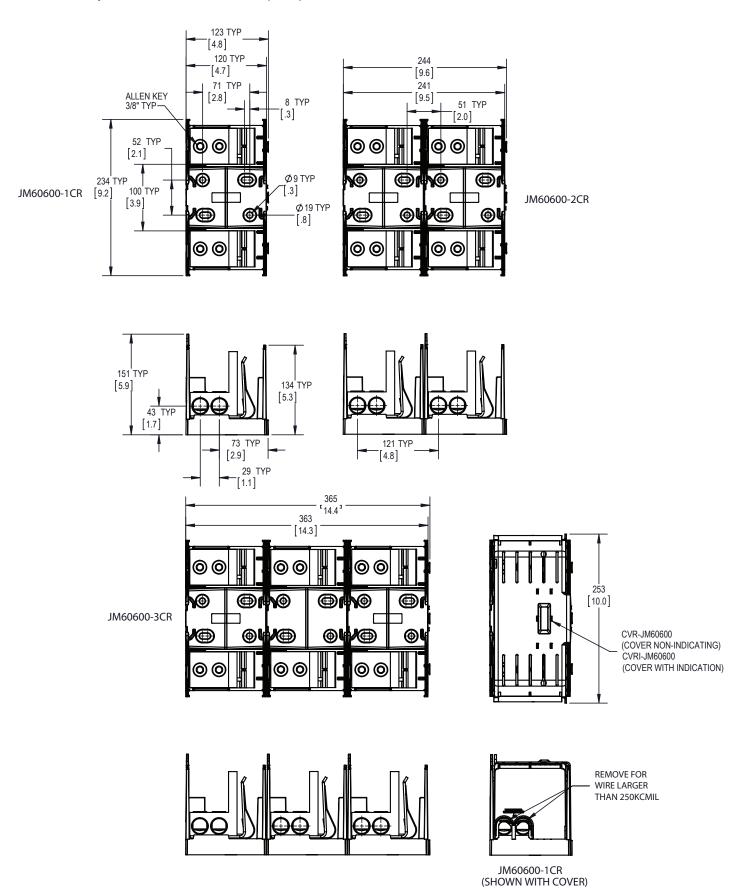


Technical Data 10488 Effective August 2017

The only controlled copy of this data sheet is the electronic read-only version located on the Eaton network drive. All other copies of this document are by definition uncontrolled. This bulletin is intended to clearly present comprehensive product data and provide technical information that will help the end user with design applications. Eaton reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Eaton also reserves the right to change or update, without notice, any technical information contained in this bulletin. Once a product has been selected, it should be tested by the user in all possible applications.

Eaton 1000 Eaton Boulevard Cleveland, OH 44122 Eaton.com

Bussmann Division 114 Old State Road Ellisville, MO 63021 United States Eaton.com/bussmannseries

© 2017 Eaton All Rights Reserved Printed in USA Publication No. 10488 August 2017 For Eaton's Bussmann series product information, call 1-855-287-7626 or visit: Eaton.com/bussmannseries

















# Fuse holder and block selection guide

Catalog pages for the blocks and holders are denoted parenthetically "()" next to their catalog symbol.

Fuse class	Catalog symbol	Blocks	DIN-Rail holders	Panel mount holders	In-line holders
СС	FNQ-R KTK-R LP-CC	BCM (8-6) 3743 (8-14) 4421 (8-14) 4515 (8-14)	CHCC (8-8) OPM-1038 (8-12) OPM-NG (8-13) CCP2-CC <sup>†††</sup> (11-2)	HPF-RR (8-43) HPS-RR (8-45) CCPLP <sup>†††</sup> (30 A) (11-32)	HEY (8-53) HEZ (8-52)
CF	FCF TCF WCF++	TCFH (1-13) TCFHNW (1-13) (Panel and DIN-Rail mount)	CCP2-CF <sup>†††</sup> (11-6) CCP2B <sup>†††</sup> (11-29)	_	_
G	SC	BG (8-15) G (8-15)	_	CCPLP <sup>†††</sup> (20 A) (11-32) HPG-EE (15 A) (8-44) HPS-EE (15 A) (8-45) HPS-FF (30 A) (8-45) HPS-JJ (20 A) (8-45)	HEC (30 A) (8-49) HEG (15 A) (8-49) HEH (20 A) (8-49) HEJ (60 A) (8-49)
H(K) 250 V	NON (250 V)	HM25_ (8-19) HM25060_MW* (8-24)	_	_	_
H(K) 600 V	NOS (600 V)	HM60_ (8-19) HM60030_MW* (8-24)	_	_	_
J	LPJ JKS	JM60_ (8-31) JM60_MW* (8-33) JP60030 (8-30)	CH_J (8-28) JT(N) (8-29)	_	_
L	KRP-C KRP-CL KLU KTU	51215** 51235**	_	_	_
RK1 250 V	LPN-RK KTN-R	RM25_ (8-21) RM25_MW* (8-26)	_	_	_
RK1 600 V	LPS-RK KTS-R	RM60_ (8-21) RM60_MW* (8-26)	_	_	_
RK5 250 V	FRN-R	RM25_ (8-21) RM25_MW* (8-26)	_	_	_
RK5 600 V	FRS-R	RM60_ (8-21) RM60_MW* (8-26)	_	_	_
T 300 V	JJN	T300 (8-35)			
T 600 V	JJS	T600 (8-37)	- 	_	_
T up to 600 V	JJN/JJS	BH-0_, BH-1_, BH-3_† (8-39)	_		
Plug fuses	P, T, TC, TL, W Edison base	Box cover units (1-30)	_	_	_
- Ing Iuses	S, SL rejection base	SA adapters (1-29)	_	_	

Power distribution fuse blocks.

#### 250 V Class R fuse reducers

Equipment fuse clip amps	Desired fuse (case) amp size	Catalog no. (pairs)
60	30	NO.263-R
100	30	NO.213-R
100	60	NO.216-R
200	60	NO.226-R
200	100	NO.2621-R
400	100	NO.2641-R
400	200	NO.242-R
	100	NO.2661-R
600	200	NO.2662-R
	400	NO.2664-R*

<sup>\*</sup> Single reducer only (pair not required).

#### 600 V Class R fuse reducers

Equipment fuse clip amps	Desired fuse (case) amp size	Catalog no. (pairs)	
60	30	NO.663-R	
100	30	NO.216-R	
100	60	NO.616-R	
200	60	NO.626-R	
200	100	NO.2621-R	
400	100	NO.2641-R	
400	200	NO.642-R	
	100	NO.2661-R	
600	200	NO.2662-R	
	400	NO.2664-R*	

<sup>\*\*</sup> Up to 800 A, contact customer satisfaction at 855-287-7626 for more information.

† Various blade bolt-on up to 700 A, see data sheets for limitations.

† WCF (wind CUBEFuse) is rated to 690 V and is not a UL Listed Class CF fuse and can only be applied in the TCFHNW holder.

<sup>†††</sup> UL 98 Listed disconnect switch, available in 1-, 2- and 3-pole versions.