

# 24V DRIVEN, RECEIPT PRINTER MINI UNIT 2" HIGH SPEED THERMAL PRINTER UNIT FTP-627USL431/435

### OVERVIEW

The FTP-627 USL Series are 24V driven high-speed printers with a ultra low profile auto cutter and long life. The FTP-627 USL Series can be used for a variety of applica tions, such as POS terminals, mini Kiosks, banking terminals, and measurement and medical equipment.

#### FEATURES

• Ultra low profile Height 145 mm, width 105 mm, depth 120 mm

#### High speed printing

It can print at 100 mm/s (800 dotlines/s) maximum by using Fujitsu's unique head drive control.

- Auto Cutter
  Long life and high reliable guilotine with dedicated motor.
- Easy paper setting
  Our lever platen release mechanism allows a wide paper route, so 83mm diameter paper can be easily inserted.
   Conventional auto loading is also available.
- Multifunctional die-cast frame
  Wide operating temperature range, long continuous printing, high ESD absorbtion and discharge of static electricity vibration and shock resistant.
- Barcodes
  Prints standard, extended and 2-D types
- RoHS compliant



FTP-627USL431

#### PART NUMBERS

		Part Number	Power	Spool
Printer mechanism with cutter and board		FTP-627USL431 (USB Interface)	5V / 24V	Y
		FTP-627USL435 (Serial Interface)	5V / 24V	Y
		FTP-627USL440 (USB /Serial)	24V only	N
Operation panel cable		ТВА		
Interface cables Serial		FTP-628Y302		
	USB	FTP-629Y301		
Power cables	Logic	FTP-629Y401		
	Head, Motor	FTP-629Y601		

\* Interface board is the FTP-627DSL601R (Serial /USB)

FTP-627DSL603R (USB)

FTP-627DSL605R (Serial)

## ■ SPECIFICATIONS

Item		Specifications	
Part number		FTP-627USL431/435	
Printing method		Thermal-line dot method	
Dot structure		432 dots/line	
Dot pitch (Horizontal)		0.125 mm (8 dots/mm)—Dot density	
Dot pitch (Vertical)		0.125 mm (8 dots/mm)—Line feed pitch	
Effective printing area		54 mm	
Number of columns		ANK 36 columns/line (maximum 12 x 24 dot for	t)
Paper width		58 mm	
Paper diameter		83 mm	
Paper thickness		60 to120 μ m (some paper in this range may not paper characteristics)	be used because of
Printing Speed		Maximum 100mm/sec. (800 dot line/sec.) at 24	V, 25°C
Character types		Alphanumeric, kana: International characters: JIS Kanji (Kanji CG loaded board):	159 types 195 types about 6800 types
Character, dimensions (W×H), number of columns		12 × 24 dots, (1.5 × 3.0 mm), 36 columns: ANK 24 × 24 dots, (3.0 × 3.0 mm), 18 columns: ANK 8 × 16 dots, (1.0 × 2.0 mm), 54 columns: ANK 16 × 16 dots, (2.0 × 2.0 mm), 27 columns: ANK	
	Standard	UPC-A, UPC-E, JAN (EAN) 13, JAN (EAN) 8, C	ode 39, 1TF CODABAR
Barcodes	Extended	CODE128	
	2-D	QR, Maxi , PDF417	
Printing mode		Page mode, line model	

# ■ SPECIFICATIONS


Item		Specification		
Interface		Conforms to USB / Serial		
	For print bood	24 VDC average current, 0.5A (0.9A peak)		
Power supply	For print head	(print ratio: 12.5%, print speed: 100mm/sec.)		
	For motor	24 VDC ±5%, 0.8 A maximum		
	For cutter	24 VDC ±5%, 1.1 A maximum		
	For logic	5 VDC ±5%, 0.5 A maximum		
Dimensions	Mechnism and board	105 x 120 x 145mm (W	/xDxH)	
Weight	Mechnism and board	Approximately 840g		
		Pulse resistance: 100 r	million pulses/dot (under out	
1 :6-	Head	standard conditions); A	brasion resistance: paper traveling	
Life		distance 50km (print ra	itio: 12.5% or less)	
	Cutter	500,000 cuts (20cuts/n	ninute)	
MTDE	Mechanism	3, 000 hours		
MTBF	Circuit board	500, 000 hours		
	Operating temperature*	0°C to 50°C		
Operating	Operating humidity	20 to 85% RH (no condensation)		
environment	Storage temperature*	-20°C TO +60°C (paper not included)		
	Storage humidity	5 to 95% RH (no condensation)		
Head temperature		Detected by thermistor		
Detection	detection			
function	Paper out /mark detection	Detected by photo-interuptor		
	Platen release	Detected by sliding switch		
		High Sensitive Paper	TF50KS-E4 (Nippon paper)	
		Standard Paper	TF60KS (Nippon paper),	
			FTP-020PU001 (58mm),	
Recommended thermal sensitive paper			PD105R (Oji paper),	
			FTP-020P0701 (58mm)	
		Medium Life Paper	TF60KS-F1, FTP-020P0102	
			(58mm), PD170R (Oji paper),	
			P220VBB-1 (Mitsubishi paper)	
		Long Life Paper	PD160R-N (Oji paper), AFB-235	
			(Mitsubishi paper), TP50KJ-R	
			(Nippon paper), HA220AA (Nippon	
			paper)	

\*+5°C to +40°C printing density assurance rance.

### ■ FUNCTION OF INTERFACE BOARD

	Item		Item
1.	Test print function	8.	Cutter trouble detect
2.	Paper out detection	9.	Motor power saving function
3.	Paper near end detection	10.	Mark detection function
4.	Platen open detection	11.	MCU operation abnormality detection
5.	Thermal head temperature abnormality detection	12.	Power ON/OFF sequence protection
6.	Blow-out fuse detection	13.	Motor over-current protection
7.	Head voltage abnormality detection	14.	Hardware timer

# ■ INTERFACE, COMMAND, OPTIONS

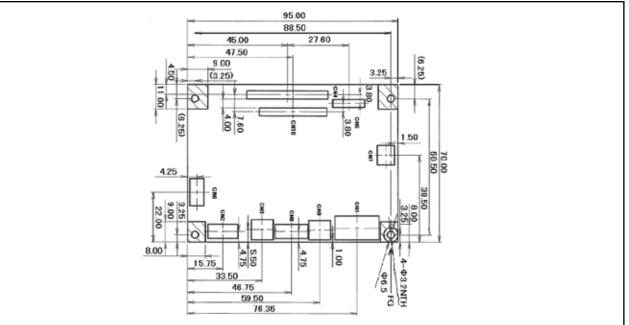

#### **Connectors on Control Board**

	Name	Functions	Remarks	Note
CN1	+24V power supply connector	Connection for +24V power supply		
CN2	RS-232C connector	Connection for serial interface		*2
CN3	USB I/F connector	Connection for USB interface		*2
CN4	-	-		
CN5	Cutter connector	Connection for paper cutter		
CN6	Operation panel connector	Connection for operation panel		*1
CN7	Near end sensor connector	Connection for near end switch		
CN8	-	-		
CN9	Logic power connector	Connection for +5V power Supply		
CN10	Head/motor connector	Connection for thermal head & paper feed motor	2-inch, 24 pin	


Note: \*1: Option

\*2: Depends on P/N

# FTP-627USL431/435

## ■ DIMENSIONS

#### 1. FTP-627USL431/435

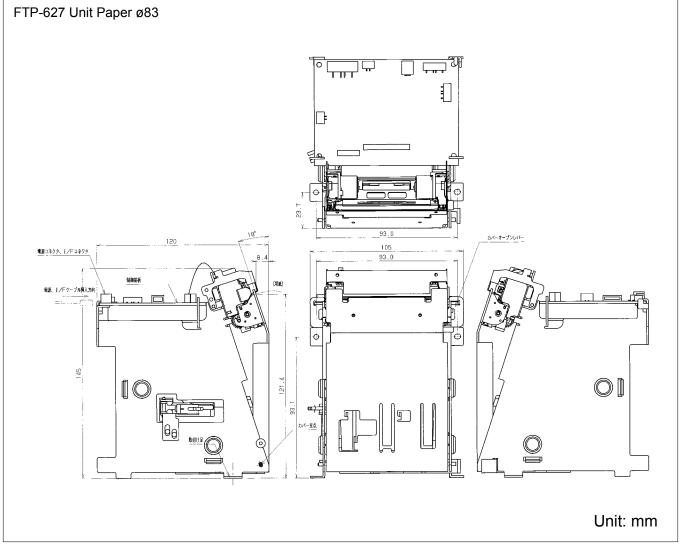


Note: 1. The cable size and FPC are not included in this drawing.

- Do not mount anything in the shaded area except the printer.
  Connect to the body with 2 screws at 2 hooks.

#### ■ DIMENSIONS

#### 1. FTP-627USL440

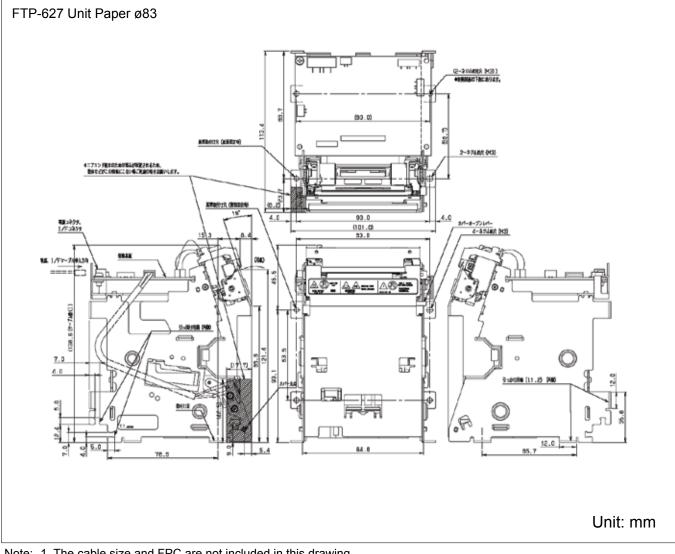

- Note: 1. The cable size and FPC are not included in this drawing.
  - Do not mount anything in the shaded area except the printer.
    Connect to the body with 2 screws at 2 hooks.

### ■ COMMANDS

Command	Contents
HT	Moves print position to the next tab.
LF	Line feed.
FF	Feeds forms (new page).
ESC FF	Data printing in page printing mode.
ECS RS	Sets reverse printing.
ESC US	Resets reverse printing.
ESC SP+n	Character spacing setting.
ESC!+n	Sets print mode.
ESC \$+n1+n2	Absolute position spacing.
ESC % + n	External registration character specification/cancellation.
ESC & +y+c1+c2+x+d1to dn	External registration character definition.
ESC *+m+n1+n2+d1+dN	Sets bit image mode.
ESC - +n	Undeline setting.
ESC 2	Sets 1/6 inch line feed length.
ESC 3+n	Sets the line feed length.
ESC ? + n	External registration character deletion.
ESC @	Printer initialization.
ESC A+n	Sets the space between the line.
ESC C+n	Sets the page length by character line.
ESC D+d1+dN +NUL	Sets the tab position.
ESC E+n	Highlighted printing specification/cancellation.
ESC J+n	Feeds paper in forward direction and prints.
ESC K+n	Print and reverse direction paper feed.
ESC L	Page printing mode selection.
ESC Q+n+!+j	Frame overlay function.
ESC R+n	Selects international character.
ESC S	Line printing mode.
ESC T+n	Print direction setting (only page mode).
ESC V+n	Right Rotation 90° specification / cancellation.

Commands continued

Command	Contents
ESC W+X1+X2+1+Y2+dX1+dX2+dX1+dY2	Page printing mode printing area setting.
ESC X+m+n	Setting the turning time of the motor excitation.
ESC Y+01h+ESC+x+a+m+d~	Program download.
ESC Y+n1+n2	Relative position setting.
ESC a+n	Positional alignment.
ESC c+1+n	Sets internal processing.
ESC c+5+n	Panel switch enable/disable setting.
ESC d+n	Printing and n-line feeding.
ESC e+n	n lines reverse feed.
ESC i	Full cut
ESC m	Partial cut
ECS s+n	Sets printing speed.
ECS t+n	Character code table selection.
ESC {+n	Sets/resets upside down printing.
ESC DEL+n	Flash memory delete
FS !+n	Kanji printing mode collective specification.
FS &	Kanji printing mode specification.
FS-+n	Kanji underline specification/cancellation.
FS *+ m+n1+n2+d1 to dn	High speed collective image printing specified.
FS.	Kanji printing mode cancellation.
FS 2+c1+c2+d1 to dn	External character definition.
FS 9+n	Sets the detection functions.
FS C+n	Kanji code system selection.
FS E+n	Correction of impressed energy.
FS S+n+n1+n2	Kanji spacing setting.
FS W+n	Kanji double height adn width printing specification/cancellation.
FS r+n* <sup>1</sup>	Parameter transmission.
FS-r+n	Setting return parameter
GS!+n	Setting character size

#### Commands continued

Command	Contents
GS \$ + n1 + n2	Vertical absolute position specification in page printing mode.
GS & +m + x + y1 + y2 + d1 to dn	Registered bit image definition.
GS' + m + n	Registered bit image printing.
GS *+x+y1+y2 +d1+dn	Registered bit image definition.
GS/ +m	Registered bit image printing.
GS <	Line feeds to the next mark.
GS A+m+n	Sets the line feed length after mark detection.
GS B+m	Angle setting of bar code.
GS E+n	Sets print quality.
GS H+n	HRI character printing position selection.
GS L+n1+n2	Left margin position setting.
GS M+n	Printer ID demand.
GS W + n1 + n2	Printing area width setting.
GS Y +n1 + n2	Vertical relative position specification in page printing mode (vertical direction of characters).
G a+n	Automatic notification setting status.
GS e+n+m	Sets bar code width.
GS f + n	HRI character font selection.
GS h+n	Sets bar code height.
y) GS k+m +d1to dk + NUL x) GS k+m+n+ d1 to dn	Bar code printing.
GS k+m+k1+k2+k3+k4+{[p1][d(1,1)] ~ [d(1,i)} ~ {[pi][d(i,1)]~[d(i,j)} [00]16	Print of 2Dcode (QR).
GS k+m+k1+k2+k3+k4+k5+d1~dn	Print of 2 Dcode (maxi).
GS k+m+k1+k2+k3+k4+k5+k6+d1~dn	Print of 2 Dcode (PDF417).
GS v	Notification of firmware version.
GS w+n	Sets bar code length.
GS (+c+m1, n2, m+fn+6 +d1~dn	Customize printer

\*1: These commands are valid with FTP-627DSL600 series.

# FTP-627USL431/435

#### PRINT SAMPLE

I F W N C A development of the second second
627A3 VO.11
627A3 B0.11
Baud : 19200 Flow : Dtr/Dsr Buffer: 4096b Parity: NonPari Head : 2inch I/F : USBcum ''#\$%&'()*+,/0123456789::<=>?@ABC DEFGHIJKLMNOPQRSTUVWXY2[¥]abcdefg hijkLmnopgrstuvwxy2[1]abcdefg hijkLmnopgrstuvwxy2[1]abcdefg hijkLmnopgrstuvwxy2[1]abcdefg 1##\$%&'()*+,/0123456789::<=>?@ABC DEFGHIJKLMNOPQRSTUVWXY2[¥]abcdefg hijkLmnopgrstuvwxy2[]abcdefg
#\$â°ç\$^ êuê #\$\$A0U``aöug £\$a[\]^`{ }`
#\$QAØA ##\$AUAUéaöaŭ ##EAUAUéaöaŭ

#### **Fujitsu Components International Headquarter Offices**

#### Japan

Fujitsu Component Limited Gotanda-Chuo Building 3-5, Higashigotanda 2-chome, Shinagawa-ku Tokyo 141 8630, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626 Email: promothq@fcl.fujitsu.com Web: www.fcl.fujitsu.com

#### North and South America

Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A. Tel: (1-408) 745-4900 Fax: (1-408) 745-4970 Email: components@us.fujitsu.com Web: http://us.fujitsu.com/components/

#### Europe

Fujitsu Components Europe B.V. Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910 Fax: (31-23) 5560950 Email: info@ceu.fujitsu.com Web: emea.fujitsu.com/components/

#### Asia Pacific Fujitsu Components Asia Ltd.

102E Pasir Panjang Road 102E Pasir Panjang Road #01-01 Citilink Warehouse Complex Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@fcal.fujitsu.com Web: http://www.fujitsu.com/sg/services/micro/components/

©2007 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice. Rev. August 8, 2007.