

DETAILED SPECIFICATIONS

Fluke 114, 115, 116 and 117 Digital Multimeters

Accuracy is specified for 1 year after calibration, at operating temperatures of 18 °C to 28 °C, with relative humidity of 0 % to 90 %.

General specifications					
Maximum voltage (between any terminal and earth ground)	600 V rms				
Safety	IEC 61010-1, Pollution Degree 2 IEC 61010-2-033 CAT III 600 V, 10 A EMC IEC 61326-1: Portable				
Fuse for A input (115, 117 only)	11 A, 1000 V, IR 17 kA (Fluke PN 803293)				
Display	Digital: 6,000 counts, updates 4/sec; Bar Graph: 33 segments, updates 32/sec				
Temperature					
Operating	-10 °C to +50 °C				
Storage	-40 °C to +60 °C				
Humidity	0 % to 90 % to 35 °C; 75 % to 40 °C; 45 % to 50 °C				
Temperature coefficient	0.1 x (specified accuracy/°C) (< 18 °C or > 28 °C)				
Operating altitude	2,000 meters				
Battery	9 Volt Alkaline (IEC 6LR61)				
Battery life	400 hours typical, without backlight				
Certifications	CE, CSA, RCM				
IP rating (dust and water protection)	IP42				
Accuracy specifications (all models)					
Function	Range	Resolution	Accuracy ± ([% of Reading]+ [Counts])		Model
DC millivolts	600.0 mV	0.1 mV	0.5 % + 2		114, 115, 116, 117
DC volts	6.000 V 60.00 V 600.0 V	0.001 V 0.01 V 0.1 V	0.5 % + 2		114, 115, 116, 117
			DC, 45 Hz to 500 Hz	500 Hz to 1 kHz	
Auto-V LoZ ¹ true-rms (114, 116, 117 only)	600.0 V	0.1 V	2.0 % + 3	4.0 % + 3	114, 116, 117
			45 Hz to 500 Hz	500 Hz to 1 kHz	
AC millivolts ¹ true-rms	600.0 V	0.1 V	1.0 % + 3	2.0 % + 3	114, 115, 116, 117
AC volts ¹ true-rms	6.000 V 60.00 V 600.0 V	0.001 V 0.01 V 0.1 V	1.0 % + 3	2.0 % + 3	114, 115, 116, 117
Continuity (115, 116 only)	600 Ω	1 Ω	Beeper on < 20 Ω, off > 250 Ω; detects opens or shorts of 500 μs or longer		114, 115, 116, 117
Ohms	600.0 Ω 6.000 kΩ 60.00 kΩ 600.0 kΩ 6.000 MΩ 40.00 MΩ	0.1 Ω 0.001 kΩ 0.01 kΩ 0.1 kΩ 0.001 MΩ 0.01 MΩ	0.9 % + 2 0.9 % + 1 0.9 % + 1 0.9 % + 1 0.9 % + 1 5.0 % + 2		114, 115, 116, 117
Diode test	2.000 V	0.001 V	0.9 % + 2		115, 116, 117
Capacitance (115, 116, 117 only)	1000 nF 10.00 μF 100.0 μF 9999 μF -	1 nF 0.01 μF 0.1 μF 1 μF -	1.9 % + 2 1.9 % + 2 1.9 % + 2 100 μF to 1000 μF: 1.9 % + 2 > 1000 μF: 5 % + 20		115, 116, 117

¹ All ac ranges except Auto-V LoZ are specified from 1 % to 100 % of range. Auto-V LoZ is specified from 0.0 V. Because inputs below 1 % of range are not specified, it is normal for this and other true-rms meters to display non-zero readings when the test leads are disconnected from a circuit or are shorted together. For volts, crest factor of ≤ 3 at 4000 counts, decreasing linearly to 1.5 at full scale. For amps, crest factor of ≤ 3. AC volts is ac-coupled. Auto-V LoZ, ac mV, and ac amps are dc-coupled.

Accuracy specifications (all models)

Function	Range	Resolution	Accuracy \pm [[% of Reading]+ [Counts]]	Model
LoZ capacitance (power-up option) (114, 116, 117 only)	1 nF to 500 μ F		10 % + 2 typical	115, 116, 117
Temperature - K-Type thermocouple (116 only)	-40 °C to 400 °C -40 °F to 752 °F	0.1 °C 0.2 °F	1 % + 10 ² 1 % + 18 ²	116
AC amps true-rms ¹ (45 Hz to 500 Hz) (115, 117 only)	6.000 A 10.00 A 20 A overload for 30 seconds maximum	0.001 A 0.01 A	1.5 % + 3	115, 117
AC μ Amps true-rms ¹ (45 Hz to 1 kHz) (116 only)	600.0 μ A	0.1 μ A	1.5 % + 3 (2.5 % + 3 > 500 Hz)	116
DC amps (115, 117 only)	6.000 A 10.00 A 20 A overload for 30 seconds maximum	0.001 A 0.01 A	1.0 % + 3	115, 117
DC μ Amps true-rms (116 only)	600.0 μ A	0.1 μ A	1.0 % + 2	116
Hz (V or A input) ² (Hz A 115, 117 only)	99.99 Hz 999.9 Hz 9.999 kHz 50.00 kHz	0.01 Hz 0.1 Hz 0.001 kHz 0.01 kHz	0.1 % + 2	115, 117
Hz (V input) ³ (115, 116, 117 only)	99.99 Hz 999.9 Hz 9.999 kHz 50.00 kHz	0.01 Hz 0.1 Hz 0.001 kHz 0.01 kHz	0.1 % + 2	116

1 All ac ranges except Auto-V LoZ are specified from 1 % to 100 % of range. Auto-V LoZ is specified from 0.0 V. Because inputs below 1 % of range are not specified, it is normal for this and other true-rms meters to display non-zero readings when the test leads are disconnected from a circuit or are shorted together. For volts, crest factor of ≤ 3 at 4000 counts, decreasing linearly to 1.5 at full scale. For amps, crest factor of ≤ 3 . AC volts is ac-coupled. Auto-V LoZ, ac mV, and ac amps are dc-coupled.

2 AC Volts Hz is ac-coupled and specified from 5 Hz to 50 kHz. AC Amps Hz is dc-coupled and specified from 45 Hz to 5 kHz. Amps input burden voltage (typical): 6 A input 2 mV/A, 10 A input 37 mV/A.

3 Frequency is ac-coupled, 45 Hz to 50 kHz.

Frequency counter sensitivity (models 115, 116, 117)

Input range		Typical sensitivity (rms sine wave)			
		5 Hz to 45 Hz	45 Hz to 5 kHz	5 kHz to 10 kHz	10 kHz to 50 kHz
Volts AC	V 60 V 600 V	0.2 V 2 V 20 V	0.2 V to 0.3 V 2 V to 3 V 20 V to 30 V	0.3 V to 0.4 V 3 V to 4 V 30 V to 40 V	0.4 V to 1.0 V 4 V to 10 V 40 V to 100 V
AC Amps (115, 117 only)	6 A 10 A	N/A N/A	0.4 A 0.5 A	N/A N/A	N/A N/A

Input characteristics (all models)

Function	Input impedance (nominal)	Common mode rejection ratio (1 k Ω unbalanced)		Normal mode rejection
Volts AC	> 5 M Ω < 100 pF	> 60 dB at dc, 50 or 60 Hz		
Volts DC	> 10 M Ω < 100 pF	> 100 dB at dc, 50 or 60 Hz		> 60 dB at 50 or 60 Hz
Auto-V LoZ (114, 116, 117 only)	~3 k Ω < 500 pF	> 60 dB at dc, 50 or 60 Hz		
	Open circuit test voltage	Full scale voltage		Short circuit current
Ohms	< 2.7 V dc	To 6.0 M Ω	40 M Ω	< 350 μ A
		< 0.7 V dc	< 0.9 V dc	
Diode test (115, 117 only)	< 2.7 V dc	2.000 V dc		< 1.2 mA


Fluke. Keeping your world up and running.®

Fluke Corporation
PO Box 9090, Everett, WA 98206 U.S.A.

For more information call:
In the U.S.A. (800) 443-5853
In Canada (800) 36-FLUKE
From other countries +1 (425) 446-5500
www.fluke.com

©2006, 2020 Fluke Corporation.
Specifications subject to change without notice.
08/2020 2793260b-en

**Modification of this document is not permitted
without written permission from Fluke Corporation.**

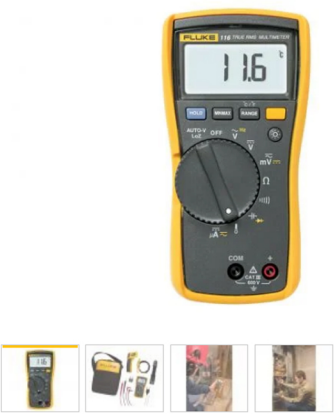

Fluke 116 Digital HVAC Multimeter

★★★★★ 4.5 (31) [Write a review](#)

Key features

- Digital multimeter designed specifically for HVAC professionals
- Includes built-in thermometer to measure temperature from -40°C to 400°C (-40°F to 752°F)
- Provides microamps to test flame sensors
- Features low input impedance to help prevent false readings due to ghost voltage
- Presents a large white LED backlight for working in poorly lit areas

 [Manuals](#)



- Product overview
- Specifications
- Models
- Reviews
- Resources
- Accessories

Product overview: Fluke 116 Digital HVAC Multimeter

The Fluke 116 DMM provides the features you need to quickly troubleshoot HVAC equipment

The Fluke 116 was specifically designed for HVAC professionals. It has everything you need to quickly troubleshoot problems with HVAC equipment and flame sensors, including a built-in thermometer to measure temperatures up to 400°C (752°F) and microamps to test flame sensors. The Fluke 116 also measures resistance, continuity, frequency, and capacitance. And the large white LED backlight makes it easy to see results even in poorly lit areas.

Fluke 116 multimeters are independently tested for safe use in CAT III 600 V environments.

Other useful features:

- Measures resistance, continuity, frequency, and capacitance
- Provides Min/Max/Average to record signal fluctuations
- Comes with a holster with probe holders for easy storage
- Features a compact ergonomic design for one-handed operation
- Fits into optional ToolPak™ magnetic hanger for hands-free operation
- CAT III 600 V safety rated

What's in the box:

- Fluke 116 Digital Multimeter
- (1 pair) 4 mm silicone test lead set
- 80BK Integrated Temperature probe
- Holster
- Installed 9 V battery
- Quick reference guide

116

True-rms Multimeter

Users Manual

July 2006 Rev. 2, 5/21

© 2006-2021 Fluke Corporation. All rights reserved.

Specifications are subject to change without notice.

All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is three years and begins on the date of shipment. Parts, product repairs, and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries, or to any product which, in Fluke's opinion, has been misused, altered, neglected, contaminated, or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available only if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that service center, with a description of the difficulty, postage and insurance prepaid (FOB Destination). Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that failure was caused by neglect, misuse, contamination, alteration, accident, or abnormal condition of operation or handling, including overvoltage failures caused by use outside the product's specified rating, or normal wear and tear of mechanical components, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court or other decision-maker of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

Table of Contents

Title	Page
Introduction	1
Contact Fluke	1
Safety Information	1
Unsafe Voltage.....	1
Display	2
Terminals	3
Error Messages.....	3
Rotary Switch Positions	4
Battery Saver™ (Sleep Mode)	4
MIN MAX AVG Recording Mode.....	5
Display HOLD	5
Backlight.....	5
Manual and Autoranging	6
Power-Up Options.....	6
Making Basic Measurements	7
Measuring Resistance	7
Testing for Continuity.....	7
Measuring AC and DC Voltage.....	8
Using Auto Volts Selection	8
Measuring AC and DC Millivolts	8
Measuring AC or DC Current.....	9
Measuring Capacitance	10
Measuring Temperature	10
Measuring Frequency	11
Making Low Impedance Capacitance Measurements	11
Testing Diodes.....	12
Measuring Current above 600 μ A.....	13
Using the Bargraph.....	13
Maintenance.....	14
Replacing the Battery	14
Cleaning	14
Specifications	15

Introduction

The Fluke Model 116, is a battery-powered, true-rms multimeter (the Meter or Product) with a 6000-count display and a bar graph.

Contact Fluke

Fluke Corporation operates worldwide. For local contact information, go to our website: www.fluke.com

To register your product, view, print, or download the latest manual or manual supplement, go to our website.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090

+1-425-446-5500

fluke-info@fluke.com

Safety Information

General Safety Information is in the printed Safety Information document that ships with the Product and at www.fluke.com. More specific safety information is listed where applicable.

A **Warning** identifies hazardous conditions and procedures that are dangerous to the user. A **Caution** identifies conditions and procedures that can cause damage to the Product or the equipment under test.


Unsafe Voltage

To alert you to the presence of a potentially hazardous voltage, the ⚡ symbol shows when the Meter measures a voltage ≥ 30 V or a voltage overload (**OL**) condition. When making frequency measurements > 1 kHz, the ⚡ symbol is unspecified.

Display

Table 1 shows the areas of the display.


Table 1. Display

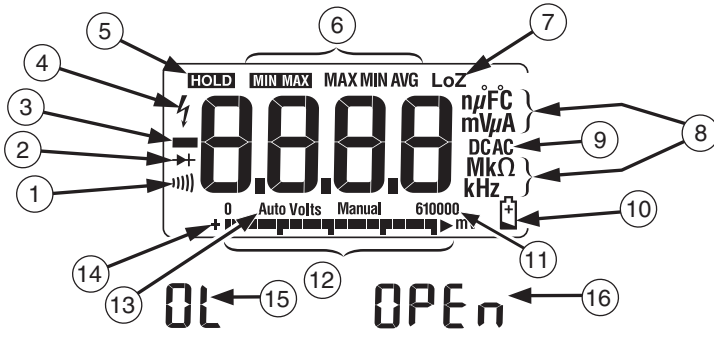		
Item	Symbol	Description
①		The Meter function is set to Continuity.
②	→	The Meter function is set to Diode Test
③	-	Input is a negative value.
④	⚡	⚠ Unsafe voltage. Measured input voltage ≥ 30 V, or voltage overload condition (OL).
⑤	HOLD	Display hold enabled. Display freezes present reading.
⑥	MIN MAX MAX MIN AVG	MIN MAX AVG mode enabled. Maximum, minimum, average or present reading displays
⑦	LoZ	The Meter is measuring voltage or capacitance with a low input impedance.
⑧	nF mV μA MkΩ kHz	Measurement units.
⑨	DC AC	Direct current or alternating current
⑩	🔋	Battery low warning.
⑪	610000 mV	Indicates the Meter's range selection.
⑫	(Bar graph)	Analog display.
⑬	Auto Volts	The Meter is in the Auto Volts function.
	Auto	Autoranging. The Meter selects the range for best resolution.
	Manual	Manual ranging. User sets the Meter's range.
⑭	+	Bar graph polarity
⑮	OL	⚠ The input is too large for the selected range.
⑯	OPEN	Thermocouple missing or defective when Temperature function is selected.

Terminals

Table 2 is a list of terminals on the Meter.

Table 2. Terminals

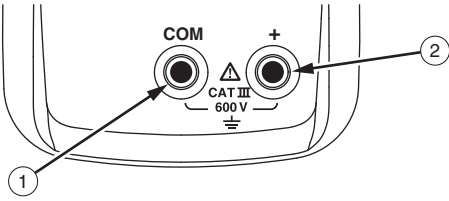	
No.	Description
①	Common (return) terminal for all measurements.
②	Input terminal for all measurements.

Error Messages

Table 3 is a list of error messages for the Meter.





Table 3. Error Messages

Error Messages	
bAtt	Battery must be replaced before the Meter will operate.
Cal Err	Calibration required. Meter calibration is required before the Meter will operate.
EEP Err	Internal error. The Meter must be repaired before it will operate.
Fll Err	Internal error. The Meter must be repaired before it will operate.

Rotary Switch Positions

Table 4 is a list of the rotary switch positions and features.

Table 4. Features

Switch Position	Measurement Function
OFF	The Meter is turned off.
AUTO-V LoZ	Automatically selects ac or dc volts based on the sensed input with a low impedance input.
\tilde{V}^{Hz}	AC voltage from 0.06 V to 600 V. Frequency from 5 Hz to 100 kHz.
\overline{V}	DC voltage from 0.001 V to 600 V.
\tilde{mV}	AC voltage from 6.0 to 600 mV, dc-coupled. DC voltage from 0.1 to 600 mV.
Ω	Ohms from 0.1 Ω to 40 M Ω .
	Temperature from -40 °C to 400 °C (-40 °F to 752 °F) with K-type thermocouple
	Continuity beeper turns on at <20 Ω and turns off at >250 Ω .
	Diode Test. Displays OL above 2.0 V.
	Farads from 1 nF to 9999 μ F.
$\mu\overline{A}$	DC current from 0.1 to 600 μ A. AC current from 6.0 to 600 μ A. DC-coupled.
<i>Note: All ac functions and Auto-V LoZ are true-rms. AC voltage is ac-coupled. Auto-V LoZ, AC mV and AC amps are dc-coupled.</i>	

Battery Saver™ (Sleep Mode)

If the Meter is ON, but inactive and not connected to voltage for more than 20 minutes, the display goes blank to save battery life. To use the Meter, press any button or turn the rotary switch. To disable the Sleep mode, see [Power-Up Options](#). The Sleep mode is always disabled in the MIN MAX AVG mode.

MIN MAX AVG Recording Mode

The MIN MAX AVG recording mode captures the minimum and maximum input values (ignoring overloads), and calculates a running average of all readings. When the Meter detects a new high or low, the Meter beeps.

Note

Autoranging and Battery Saver™ are disabled in MIN MAX AVG mode.

To set up:

1. Select the measurement function and range.
2. Push **MIN MAX** to enter MIN MAX AVG mode.
3. **MIN MAX** and MAX show on the display. The highest reading detected since entering MIN MAX AVG shows on the display.
4. Push **MIN MAX** to step through the low (MIN), average (AVG), and present readings.
5. To pause MIN MAX AVG recording without erasing stored values, push **HOLD**. (**HOLD** shows on the display.)
6. To resume MIN MAX AVG recording, push **HOLD** again.
7. To exit and erase stored readings, push **MIN MAX** for at least one second, or turn the rotary switch.

Display HOLD


Warning

To avoid electric shock, when Display HOLD is activated, be aware that the display will not change when you apply a different voltage.

In the Display HOLD mode, the Meter freezes the display.

1. Push **HOLD** to activate Display HOLD. (**HOLD** shows on the display.)
2. To exit and return to normal operation, push **HOLD** or turn the rotary switch.

Backlight

Push  to toggle the backlight on and off.

The backlight automatically turns off after 40 seconds. To disable backlight auto-off, see [Power-Up Options](#).

Manual and Autoranging

The Meter has both Manual and Autorange modes. The Meter defaults to Autorange. To toggle between Manual and Autorange, push **RANGE** for 1 second.

- In the Autorange mode, the Meter selects the range with the best resolution.
- In the Manual Range mode, you override Autorange and select the range yourself. Push **RANGE** for 1 second to enter Manual range. (**Manual** shows on the display.) Push **RANGE** to increment the range. After the highest range, the Meter wraps to the lowest range.



Note

*You cannot manually change the range in the MIN MAX AVG or Display HOLD modes. If you push **RANGE** while in MIN MAX AVG or Display Hold, the Meter beeps twice, indicating an invalid operation and the range does not change.*

Power-Up Options

To select a Power-Up Option, hold down the button indicated in [Table 5](#) while turning the Meter from OFF to any other function. Power-Up Options are canceled when you turn off the Meter and when sleep mode is activated.

Table 5. Power-Up Options

Button	Power-Up Options
HOLD	Turns on all display segments until button is released.
MIN MAX	Disables beeper. bEEP shows when enabled.
RANGE	Enables low impedance capacitance measurements. LCAP shows when enabled.
	Disables Battery Saver™ (Sleep mode). PoFF shows when enabled.
	Disables auto backlight off. LoFF is displayed when enabled.


Making Basic Measurements

When connecting the test leads to the circuit or device, connect the common (**COM**) test lead before connecting the live lead; when removing the test leads, remove the live lead before removing the common test lead.

⚠⚠ Warning

To prevent electric shock, injury, or damage to the Meter, disconnect circuit power and discharge all high-voltage capacitors before testing resistance, continuity, diodes, or capacitance.


Measuring Resistance

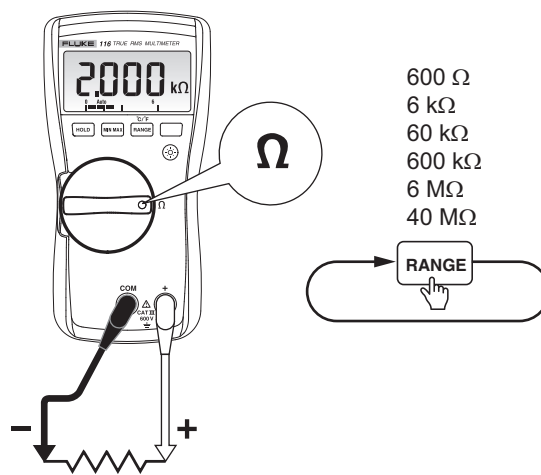


Testing for Continuity

Note

Use the continuity function as a fast, convenient method to check for opens and shorts. For maximum accuracy in making resistance measurements, use the Meter's resistance (Ω) function.

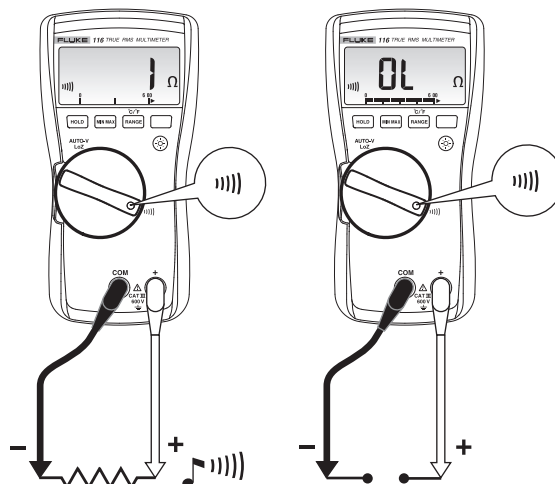

Measuring AC and DC Voltage

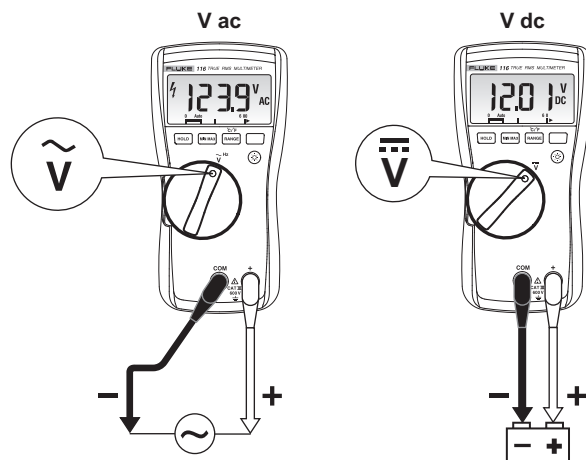


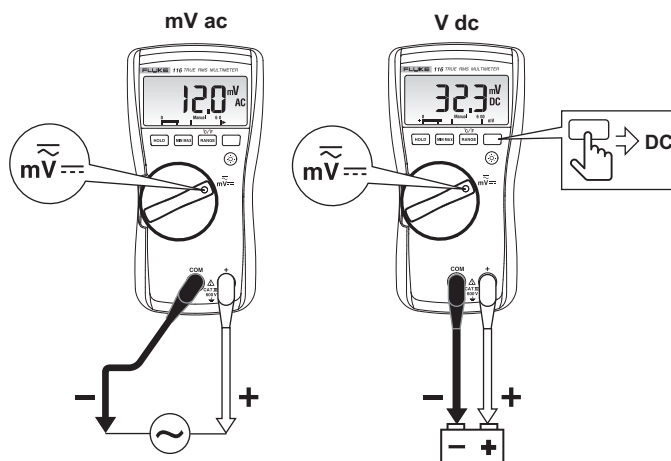
Using Auto Volts Selection

With the function switch in the $\text{AUTO-V}_{\text{LoZ}}$ position, the Meter automatically selects a dc or ac voltage measurement based on the input applied between the **V** or **+** and **COM** jacks.

This function also sets the Meter's input impedance to approximately 3 k Ω to reduce the possibility of false readings due to ghost voltages.

Measuring AC and DC Millivolts

With the function switch in the $\text{mV} \sim$ position, the Meter measures ac plus dc millivolts. Press  to set the Meter to dc millivolts.



Measuring AC or DC Current


⚠⚠ Warning

To avoid personal injury or damage to the Meter:


- Never attempt to make an in-circuit current measurement when the open-circuit potential to earth is >600 V.
- Use the proper terminals, switch position, and range for your measurement.

To measure flame rectification circuits:

1. Turn the function switch to $\overline{\mu A} \sim$.
2. Connect the Meter between the flame sensor probe and the control module.
3. Turn heating unit on and record μA measurement.

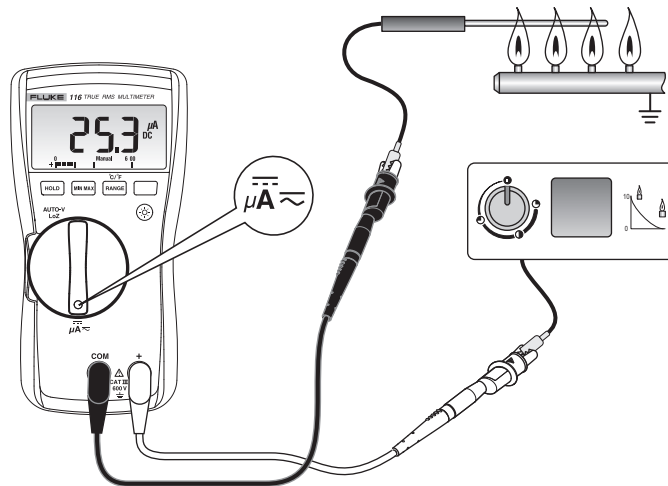


Measuring Capacitance

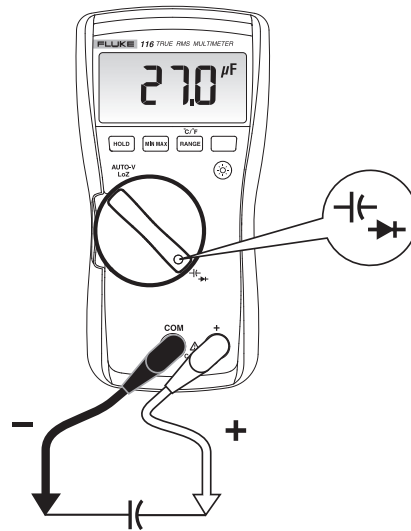

Measuring Temperature

Warning

To prevent risk of electric shock, do NOT connect 80BK to live circuits.

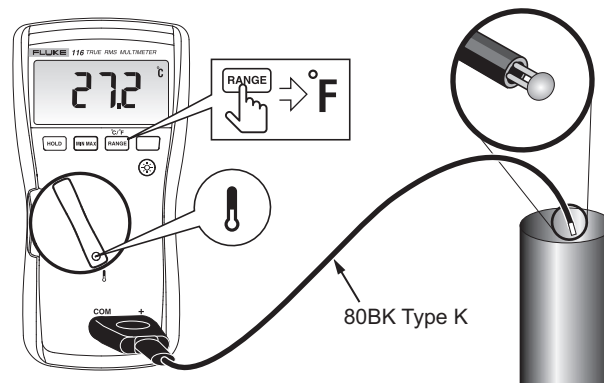

Measuring Frequency

⚠⚠ Warning


To prevent electrical shock, disregard the bar graph for frequencies >1 kHz. If the frequency of the measured signal is >1 kHz, the bar graph and f are unspecified.

The Meter measures the frequency of a signal by counting the number of times the signal crosses a trigger level each second. The trigger level is 0 V, 0 A for all ranges.

Press ☐ to turn on or turn off the frequency measurement function on and off. Frequency works with ac functions only.

In frequency, the bar graph and range annunciator indicate the ac voltage or current present.

Select progressively lower ranges using manual ranging for a stable reading.

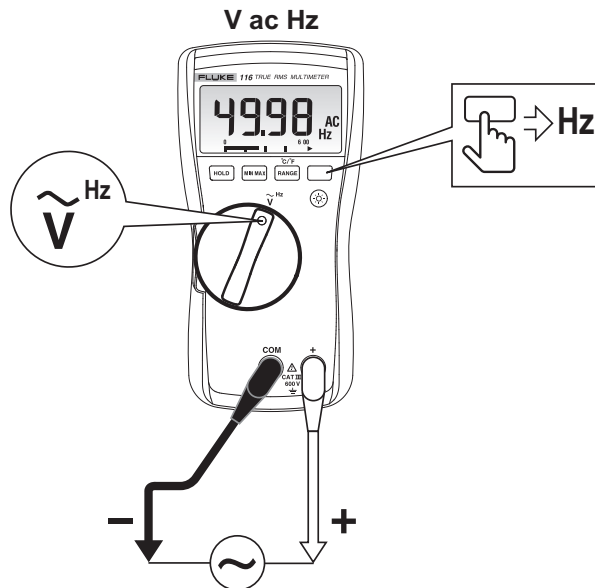

Making Low Impedance Capacitance Measurements

For making capacitance measurements on cables with ghost voltage:


1. Hold ☐ as you turn on the Meter to enable the low-input impedance Capacitance mode.
2. Wait until **LCAP** shows on the display.

In this mode, capacitance measurements will have a lower accuracy and lower dynamic range.

Note


This setting is not saved when the Meter is turned off or goes into sleep mode.

Testing Diodes

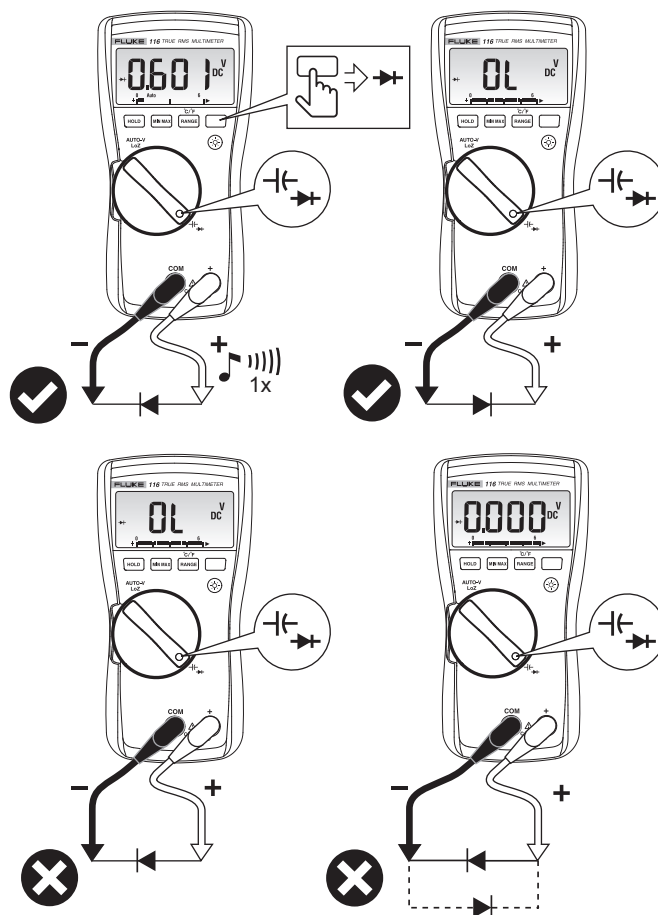

Measuring Current above 600 μ A

The millivolt and voltage function of the Meter can be used with an optional mV/A output Current Probe to measure currents that exceed the rating of the Meter. Make sure the Meter has the correct function, AC or DC, selected for your current probe. Refer to a Fluke catalog or contact your local Fluke representative for compatible current clamps.

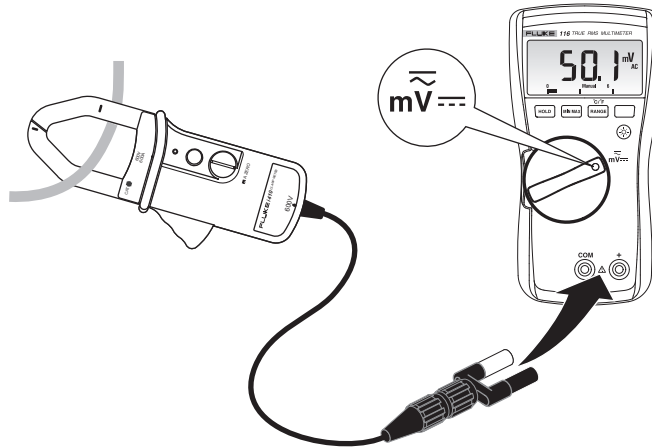

Using the Bargraph

The bar graph is like the needle on an analog meter. It has an overload indicator (►) to the right and a polarity indicator (⊕) to the left.

Because the bar graph is much faster than the digital display, the bar graph is useful for making peak and null adjustments.

The bar graph is disabled when measuring capacitance. In frequency, the bar graph and range annunciator indicates the underlying voltage or current up to 1 kHz.

The number of segments indicates the measured value and is relative to the full-scale value of the selected range.

In the 60 V range, for example (see below), the major divisions on the scale represent 0, 15, 30, 45, and 60 V. An input of -30 V turns on the negative sign and the segments up to the middle of the scale.



Maintenance

Maintenance of the Meter consists of battery replacement and case cleaning.


Replacing the Battery

⚠⚠ Warning

To prevent shock, injury, or damage to the Meter, remove test leads from the Meter before opening the case or battery door.

See [Figure 1](#) for disassembly.

Figure 1. Disassembly

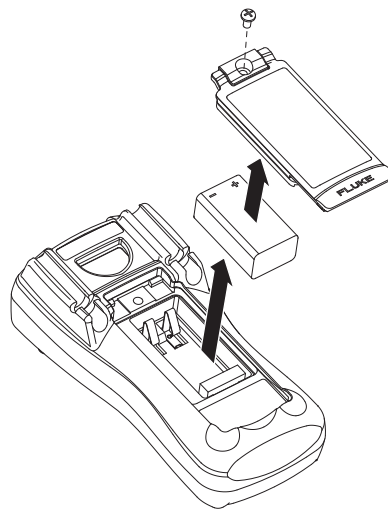

To remove the battery door for battery replacement:

1. Remove the test leads from the Meter.
2. Remove the battery door screw.
3. Use the finger recess to lift the door slightly.
4. Lift the door straight up to separate it from the case.
5. The battery fits inside the battery door, which is then inserted into the case, bottom edge first, until it is fully seated. Do not attempt to install the battery directly into the case.
6. Install and tighten battery door screw.

Cleaning

Wipe the case with a damp cloth and mild detergent. Dirt or moisture in the terminals can affect readings.

Specifications

Accuracy is specified for 1 year after calibration, at operating temperatures of 18 °C to 28 °C, with relative humidity at 0 % to 90 %.

Extended specifications are available at www.fluke.com.

Maximum voltage between any terminal and earth ground	600 V
Display	
Digital	6000 counts, updates 4/s
Bar Graph	33 segments, updates 32/s
Temperature	
Operating	-10 °C to 50 °C
Storage	-40 °C to 60 °C
Temperature Coefficient	0.1 x (specified accuracy)/°C (<18 °C or >28 °C)
Altitude	
Operating	2000 meters
Storage	10 000 meters
Relative Humidity	95 % to 30 °C, 75 % to 40 °C, 45 % to 50 °C
Battery	IEC 6LR61
Battery Life	400 hours typical, without backlight
Safety	IEC 61010-1: Pollution Degree 2 IEC 61010-2-033 Measurement CAT III 600 V
Ingress Protection	IEC 60529: IP42 (non-operating)
Electromagnetic Compatibility (EMC)	
International	IEC 61326-1: Portable Electromagnetic Environment CISPR 11: Group 1, Class A
<i>Group 1: Equipment has intentionally generated and/or uses conductively-coupled radio frequency energy that is necessary for the internal function of the equipment itself.</i>	
<i>Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purposes. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances.</i>	
<i>Caution: This equipment is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.</i>	
<i>Emissions that exceed the levels required by CISPR 11 can occur when the equipment is connected to a test object.</i>	
Korea (KCC)	Class A Equipment (Industrial Broadcasting & Communication Equipment)
<i>Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.</i>	
USA (FCC)	47 CFR 15 subpart B. This product is considered an exempt device per clause 15.103.

Table 6. Accuracy Specifications

Function	Range	Resolution	Accuracy ± ([% of Reading] + [Counts])	
DC Millivolts	600.0 mV	0.1 mV	0.5 % + 2	
DC Volts	6.000 V	0.001 V	0.5 % + 2	
	60.00 V	0.01 V		
	600.0 V	0.1 V		
			DC, 45 to 500 Hz	500 Hz to 1 kHz
Auto-V LoZ ^[1] True-rms	600.0 V	0.1 V	2.0 % + 3	4.0 % + 3
			45 to 500 Hz	500 Hz to 1 kHz
AC millivolts ^[1] True-rms	600.0 mV	0.1 mV	1.0 % + 3	2.0 % + 3
AC Volts ^[1] True-rms	6.000 V	0.001 V	1.0 % + 3	2.0 % + 3
	60.00 V	0.01 V		
	600.0 V	0.1 V		
Continuity	600 Ω	1 Ω	Beeper on <20 Ω, off >250 Ω. Detects opens or shorts of 500 μs or longer.	
Ohms	600.0 Ω	0.1 Ω	0.9 % + 2	
	6.000 kΩ	0.001 kΩ	0.9 % + 1	
	60.00 kΩ	0.01 kΩ	0.9 % + 1	
	600.0 kΩ	0.1 kΩ	0.9 % + 1	
	6.000 MΩ	0.001 MΩ	0.9 % + 1	
	40.00 MΩ	0.01 MΩ	5.0 % + 2	
Diode Test	2.000 V	0.001 V	0.9 % + 2	
Capacitance	1000 nF	1 nF	1.9 % + 2	
	10.00 μF	0.01 μF	1.9 % + 2	
	100.0 μF	0.1 μF	1.9 % + 2	
	9999 μF	1 μF	100 μF - 1000 μF: 1.9 % + 2 >1000 μF: 5 % + 20	
Lo-Z Capacitance (Power-up option)	1 nF to 500 μF		10 % + 2 typical	
Temperature (Type K Thermocouple)	-40 °C to 400 °C	0.1 °C	1 % + 10 ^[2]	
	-40 °F to 752 °F	0.2 °F	1 % + 18 ^[2]	
AC μAmps True-rms ^[1] (45 Hz to 500 Hz)	600.0 μA	0.1 μA	1.5 % + 3 (2.5 % + 3 >500 Hz)	
DC μAmps	600.0 μA	0.1 μA	1.0 % + 2	

Table 6. Accuracy Specifications (cont.)


Function	Range	Resolution	Accuracy ± ([% of Reading] + [Counts])
Hz (V or A input) ^[3]	99.99 Hz	0.01 Hz	0.1 % + 2
	999.9 Hz	0.1 Hz	
	9.999 kHz	0.001 kHz	
	50.00 kHz	0.01 kHz	
Notes:			
<p>[1] All ac ranges except Auto-V LoZ are specified from 1 % to 100 % of range. Auto-V LoZ is specified from 0.0 V. Because inputs below 1 % of range are not specified, it is normal for this and other true-rms meters to display non-zero readings when the test leads are disconnected from a circuit or are shorted together. For volts, crest factor of ≤3 at 4000 counts, decreasing linearly to 1.5 at full scale. For amps, crest factor of ≤3. AC volts is ac-coupled. Auto-V LoZ, AC mV, and AC amps are dc-coupled.</p> <p>[2] AC Volts Hz is ac-coupled and specified from 5 Hz to 99.99 kHz. Minimum input required above 50.00 kHz typically is >1.1 vac sine. Minimum input typical and not specified. AC Amps Hz is dc-coupled and specified from 45 Hz to 5 kHz.</p> <p>[3]  >10 A unspecified. Duty cycle: >10 A to 20 A, 30 seconds on, 10 minutes off.</p>			

Table 7. Input Characteristics

Function	Input Impedance (Nominal)	Common Mode Rejection Ratio (1 kΩ Unbalanced)		Normal Mode Rejection
Volts AC	>5 MΩ <100 pF	>60 dB at dc, 50 or 60 Hz		- - -
Volts DC	>10 MΩ <100 pF	>100 dB at dc, 50 or 60 Hz		>60 dB at dc, 50 or 60 Hz
Auto-V LoZ	~3 kΩ <500 pF	>60 dB at dc, 50 or 60 Hz		- - -
	Open Circuit Test Voltage	Full Scale Voltage		Short Circuit Current
Ohms	<2.7 V dc	to 6.0 MΩ	40 MΩ	<350 μA
		<0.7 V dc	<0.9 V dc	
Diode Test	<2.7 V dc	2.000 V dc		<1.2 mA

